

# Retail Scale UC3-Touch

## be connected be successful



**User manual**  
after SW Version 1.13

- APPU
- Counter service
- Self-serve
- Pre-pack 1
- Inventory



Unlimited *CONNECTIVITY*

**METTLER TOLEDO**

# Declaration of conformity

We, **Mettler-Toledo (Albstadt) GmbH**  
**Unter dem Malesfelsen 34**  
**D-72458 Albstadt**

declare under our sole responsibility that the product

**Retail Scale**  
**Model UC3 - ...-A/-P**

starting from serial number 2875420

to which this declaration relates, is in conformity with the following standards and directives:

<b>Council Directive</b>	<b>Norm</b>
About electromagnetic compatibility 89/336/CEE; directive amendment 92/31/CEE; 93/68/CEE	EN 61000-6-1 EN 61000-6-3
relative to electrical supplies for interior use with limited voltages defined 73/23/CEE; directive amendment 93/68/CEE	EN 60 950
Non automatic Balances and Scales 90/384/CEE; directive amendment 93/68/CEE	EN 45501

**Albstadt, December 2007**

**Mettler-Toledo (Albstadt) GmbH**



**Christoph Dermond, General Manager**



**Roland Schmale, Quality Manager**

<b>Index</b>	<b>Page</b>
Calibration Instructions .....	7
Switching the scale on-/off .....	8
Safety Instructions .....	8
Installation Instructions .....	9
Automatic zeroing and zeroing the scale .....	9
Information on thermal paper and thermal labels .....	10
Using, maintaining and cleaning the touchscreen .....	11
Maintenance Service Scale .....	12
Cleaning .....	12
Cleaning of print head .....	12
Replacement of receipt roll .....	13
Replacement of label roll .....	13
Maintenance of Service Scale with Linerless Printer .....	14
Cleaning of print head .....	14
Replacement of Linerless paper roll .....	15
Exchanging the interchangeable roller in the linerless printer .....	16
Exchanging the interchangeable roller .....	16
Counter Service mode .....	20
Function keys .....	21
Extended function keys .....	22
Display .....	24
Operator side .....	24
Customer side .....	24
Meaning of the displayed icon's: .....	25
General .....	26
Info about next possible key .....	26
Printout of code functions and program versions .....	26
Query of operator memories .....	26
Adjustment of display contrast .....	27
Accompanying receipt .....	27
Modification of priority department .....	28
Priority price .....	28
Use 2nd price of all Plu's. ....	28
Quick Service .....	28
Switching to another application .....	29
Set date and time .....	29
Operation .....	30
Weighing PLU or piece PLU with PLU-number .....	30
Weighing PLU or piece PLU with PLU direct key .....	30
Weighing PLU with free unit price entry (configurable) .....	30
Weighing PLU with manual entry of weight (bulk sales) .....	31
Weighed and non-weighed PLUs from another department .....	31
Weighing PLU or piece PLU with product tip .....	32
Weighing PLU and piece PLU with assigned 2nd price .....	33
Select weighing PLU and piece PLU with SHIFT key .....	33
Piece PLU multiplication .....	33
Operator service with free entries .....	34
Weighing with unit price entry .....	34
Weighing with assignment to an article group .....	34
Manual entry + or - .....	35
Manual entry + or - with multiplication .....	35

<b>Contents</b>	<b>Page</b>
Customer Receipts .....	36
Creation .....	36
Customer subtotal (show and print subtotal) .....	36
Customer total (show and print total) .....	36
Customer total with change calculation .....	36
Customer total with markup or discount .....	37
Receipt reprinting.....	37
Customer receipt reopening .....	38
<b>Tare.....</b>	<b>39</b>
Types and use .....	39
Tare printout on customer receipt (multiple tare) .....	39
Tare compensation of an empty container .....	39
Tare fixation for multiple bookings.....	39
Tare manual entry .....	40
Tare memory .....	40
Tare direct key.....	41
Operator tare.....	41
Plu Tare .....	41
<b>Operator .....</b>	<b>42</b>
Login and Logoff .....	42
Operator key logoff .....	42
Operator key temporary logoff .....	42
Operator key login .....	42
<b>Void .....</b>	<b>43</b>
Types and use .....	43
Void of last item .....	43
Void of previous item .....	43
Void of customer receipt.....	44
<b>Self-Service (Self-S. Mode) .....</b>	<b>45</b>
Operation with symbol keys .....	45
Error message "Underload detection" .....	45
Functions in the Self-Service mode (180 keys overlay) .....	47
Leave Self-S. mode.....	47
Sensor adjustment.....	47
Primary tare off/on.....	47
Zero setting.....	47
Label feed.....	47
Functions in the Self-S. Mode (100-keys overlay) .....	48
Leave Self-S. mode.....	48
Sensor adjustment .....	48
Primary tare off/on .....	48
Zero setting.....	48
Label feed.....	48
Functions in the Self-S. Mode (50-keys overlay) .....	49
Leave Self-S. mode.....	49
Sensor adjustment .....	49
Primary tare off/on.....	49
Zero setting.....	49
Label feed.....	49
Functions in the Self-S. Mode (25-keys overlay) .....	50
Leave Self-S. mode.....	50
Sensor adjustment.....	50
Primary tare off/on.....	50
Zero setting.....	50
Label feed.....	50


<b>Contents</b>	<b>Page</b>
Prepacking.....	51
Selecting PP mode .....	51
Select mode of operation .....	52
Prepackaging mode.....	53
Operator Service .....	54
Non-weigh articles.....	54
(Repeat labelling).....	54
Label layout key .....	55
Date key .....	56
Leave PP- Mode.....	56
Leaving PP mode.....	57
<b>INVENTORY .....</b>	<b>59</b>
Selecting Inventory mode.....	59
Inventory mode .....	60
Inventory process .....	61
Mode key .....	62
Start of the NonSalesMode or .....	62
Selection of a sales mode.....	62
<b>Non Sales Mode .....</b>	<b>65</b>
Starting .....	65
Menu navigation .....	66
Quick entry of a menu.....	66
<b>Code functions .....</b>	<b>67</b>
<b>NonSalesMode (- Data maintenance) .....</b>	<b>68</b>
Article (411) create, list, delete .....	68
Special offers (412) create/modify, delete article by special offer .....	76
Ingredients (414) create/modify, delete.....	82
Price change (42) Modify .....	85
Main article groups (43) create/modify, delete.....	87
Article groups (43) create/modify, delete .....	89
Main departments (441) create/modify, delete.....	91
Department (442) create/modify, delete .....	93
Text - Advertising text (452) create/modify, delete .....	96
Text - Date texts (453) create/modify, delete .....	98
Text - Company names (454) create/modify, delete .....	100
Text - Branch texts (457) create/modify, delete.....	102
Text - Header texts (458) create/modify, delete.....	104
Text - Footer text (459) reate/modify, delete .....	106
Text - Product tip (45+1) create/modify, delete .....	108
Text - Operator text (45+2) create/modify, delete .....	110
Tare (47) create/modify, delete .....	112
VAT (48) create/modify, delete .....	114
Barcode(49) create/modify, delete .....	116
Keyboard templates (- Standard) (4 + 11) create/modify, delete .....	119
Data maintenance Operator (4 + 2) create/modify, delete .....	120
<b>Turnovers (Z Reports) (5) printing .....</b>	<b>122</b>
<b>Modules requiring activation.....</b>	<b>124</b>
1. Receipt forwarding.....	124
2. Proof of origin .....	124
3. Cash register functions.....	124
4. EC-Cash.....	124
<b>Information about the proof of origin .....</b>	<b>125</b>

<b>Contents</b>	<b>Page</b>
Legend Date format .....	126
Font types 2" Printer .....	127
Font types 3" Printer Part 1 .....	128
Font types 3" Printer Part 2 .....	129
Code numbers .....	130
Menu tree.....	134
Index .....	137
Index.....	138

## Calibration Instructions

---

### Important note on calibrated scales in EEC-countries

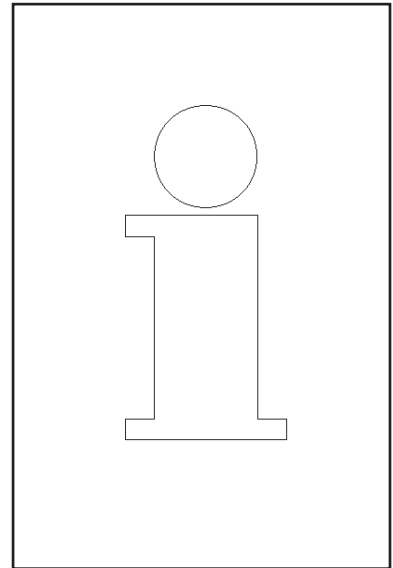**M**

**Factory calibrated scales carry the preceding identification on the packaging label.**

**M**

**Scales identified by the green "M"-Label applied on the calibration mark can be operated immediately.**

**M**

**Scales calibrated in two steps carry the preceding identification on the label applied to the package.**

These scales have already been calibrated (declaration of construction conformity according to EN 45501-8.2) and have to be calibrated again on the working place. This calibration has to be conducted by the certified METTLER TOLEDO Service.

Please contact your METTLER TOLEDO technical service.

Shop scales, used for legal trade are submitted to calibration.

Please respect the current calibration directives in your country.

## Switching the scale on-/off

---


The scale is switched on and off using a power button instead of a traditional mains power switch. Hence,

- **Switching off** (shutting down the operating system) takes place after a time delay.

- **Switching on** (booting up the operating system) takes place normally.



- Before working on the scale, **unplug it from the mains** each time to ensure it is free of any electrical current.

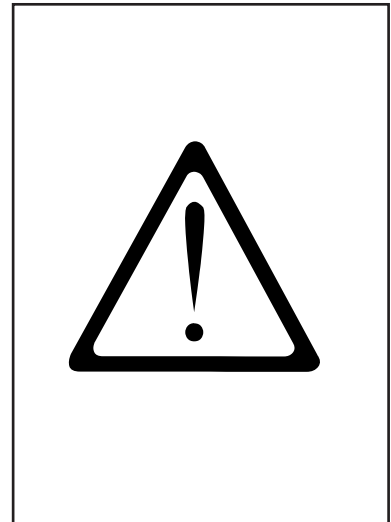

## Safety Instructions

---




Do not use the scale in the proximity of an explosive gas mixture, of vapours, steam, or dust!

Any electrical device, not equipped with a specific "e" type of protection and used in an area with an explosive atmosphere represents an important danger in this environment!

To prevent any accident, only qualified service personnel is authorised to open this device!



**CAUTION!**  
**DANGER OF EXPLOSION IN CASE OF IMPROPER REPLACEMENT OF BATTERY.**  
**DISPOSAL OF USED BATTERIES ACCORDING TO INSTRUCTIONS.**

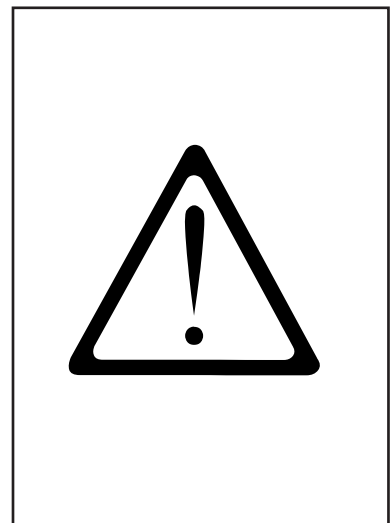




## Installation Instructions

In general, your scale is part of a scale network. The installation, levelling and application are handled by METTLER TOLEDO or an authorised dealer. During the introduction you will be comprehensively trained and receive all necessary documentation. Your scale should only be connected to the mains with the power cord supplied.


The water level is used to level your scale. It is fixed at the back of the device. The correct alignment (air bubble has to be in the centre of the water level) of the device can be achieved by adjusting the adjustable scale feet. The water level should be checked regularly to assure a correct level reading. When moving the scale, the level should be checked and corrected if necessary.

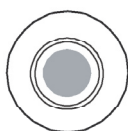

right



wrong

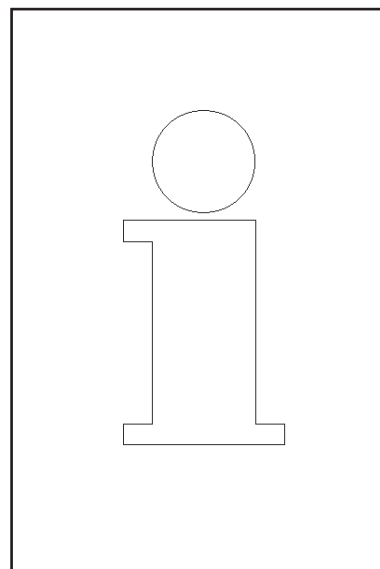



## Automatic zeroing and zeroing the scale

The scale has an automatic zeroing feature, which means it automatically compensates for small variations in weight (e.g. due to fatty residues on the weighing platter). Automatic zeroing is not active if a packaging weight has been tared. After the removal of dirt or residue, with the scale switched on, the display can either

- show a negative value,
- or show the segments " \_ \_ \_ \_ \_ "

 
### Remedy:

-   Press the code key followed by the clear key.

- or  Press the zeroing key.

### If the error message occurs again:


- Switch the scale off and then back on again (switch-on zeroing)

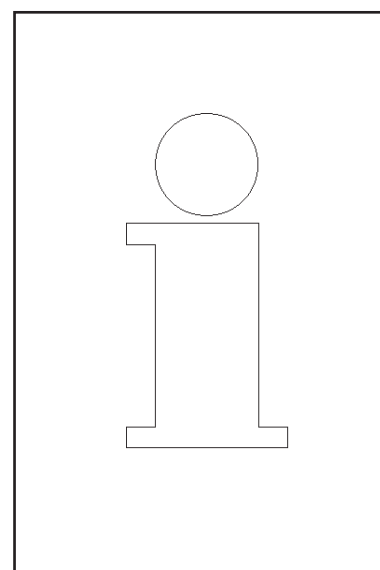

## **Information on thermal paper and thermal labels**

The printer used in UC retail scales is a thermal one. Only use thermal paper, thermal label paper or linerless paper in this printer. METTLER TOLEDO has tested these paper types (e.g. L1-21, L1-31 for receipt printers; P3-20, P3-011 for label printers and P5-23, P5-24 for linerless printers) over a long term before deciding to use them. The paper is also approved for use in UC scales by the respective weights and measures authority.

Using paper other than that mentioned above could reduce the print quality and the service life of the printhead. In such cases, we accept no guarantee for the thermal printer.

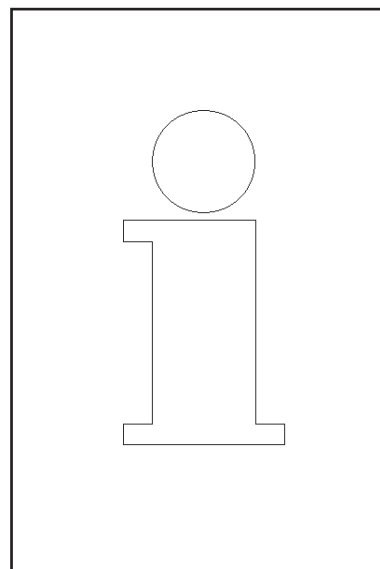

## **Using, maintaining and cleaning the touchscreen**

The touchscreen requires minimum maintenance. For regular cleaning of the touchscreen, we recommend using a soft cloth with a little screen cleaner, or a glasses cleaning cloth, or a damp cloth with a glass cleaning agent applied to it.


Strong pressure, scratching the surface or operating with hard, sharp or pointed objects can cause damage which can render the touchscreen defective.

Ensure the scale is switched off before cleaning it, in order to avoid accidental misuse.

**Note:**

Always first apply the cleaning agent to the cloth before cleaning the touchscreen.

Do not use organic acid or alkaline solutions for cleaning!

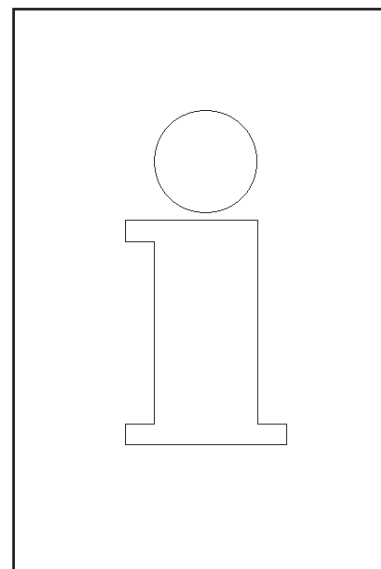


## Maintenance Service Scale



**Prior to any intervention always pull mains plug from wall outlet.**

### Cleaning


- Switch off scale and pull mains plug.
- Clean operating unit with a moist (not wet) cloth.
- Connect mains plug and switch on scale again.

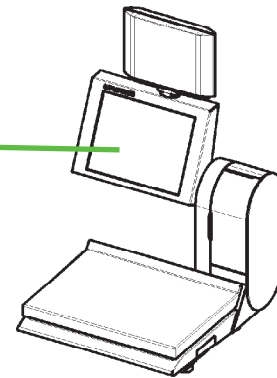

Do not use any solvent based cleaners.  
Clean with a normal detergent only.

### Cleaning of print head


- Switch off scale and pull mains plug.
- Open door.
- **Receipt printer:** Press release lever **backwards**.  
The print head folds towards the front.
- **Label printer:** Press release lever **downwards**.  
The print head folds upwards.
- Take off cap from the cleaning pen.
- Clean the front part of the print head with the moist tip of the pen.
- **Receipt printer:** Press print head **upwards** until it latches again.
- **Label printer:** Press print head **downwards** until it latches again.

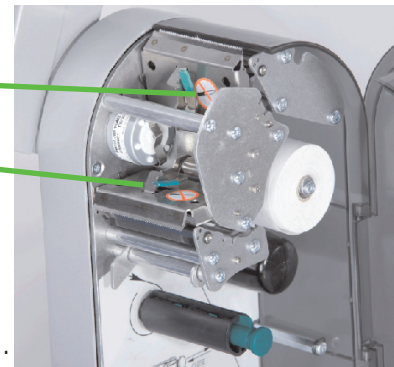


For cleaning of the print head only use the included cleaning pen.  
With other objects the print head could be damaged.

### Replacement of receipt roll

- Remove the core of the empty roll.
- Press release lever **backwards**.  
The print head folds towards the front.
- Insert new receipt roll as shown in opposite illustration.
- The leading edge of the paper is on the left side.
- Pull thermal paper towards front until correct tension is reached.
- Press print head **upwards** until it latches again.
- Tear off protruding paper.

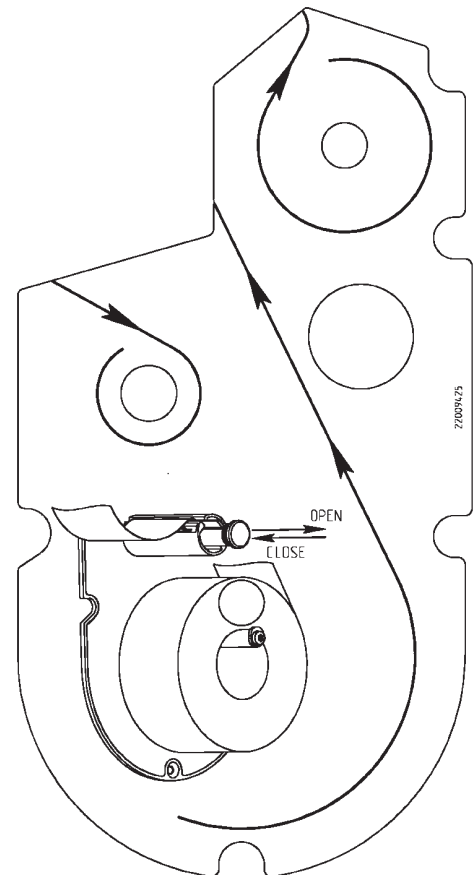

### Replacement of label roll

- Remove the core of the empty roll.
- Press release lever **downwards**.  
The print head folds upwards.
- Pull green wind-up spindle out and remove carrier tape.
- Insert new label roll as shown in opposite illustration.
- The leading edge of the paper is on the left side.
- Insert carrier tape in wind-up spindle and push wind-up spindle back.
- Press print head **downwards** until it latches again.
- Press paper feed key. 


## **Maintenance of Service Scale with Linerless Printer**



**PRIOR to any intervention always pull mains plug from wall outlet.**


### **Cleaning of print head**



- Switch off scale and pull mains plug.
- Open door.
- Press release lever downwards.  
The print head folds upwards.
- Take off cap from the cleaning pen.
- Clean the front part of the print head with the moist tip of the pen.
- Press print head downwards until it latches again.
- Close cleaning pen with the cap.

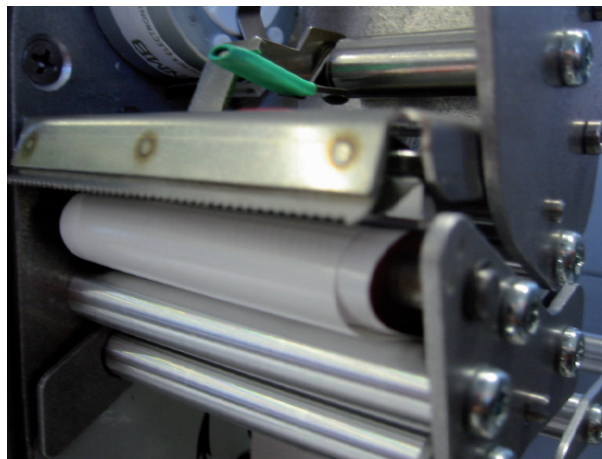

For cleaning of the print head only use the included cleaning pen.  
With other objects the print head could be damaged.

### **Replacement of Linerless paper roll**

- Remove the core of the empty roll.
- Press release lever downwards.  
The print head folds upwards.
- Insert new linerless paper roll as shown in opposite illustration.
- The leading edge of the paper is on the left side.
- Press print head downwards until it latches again.
- Press paper feed key  .

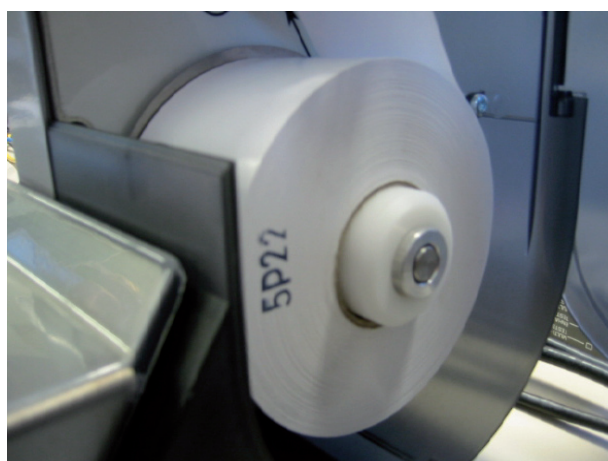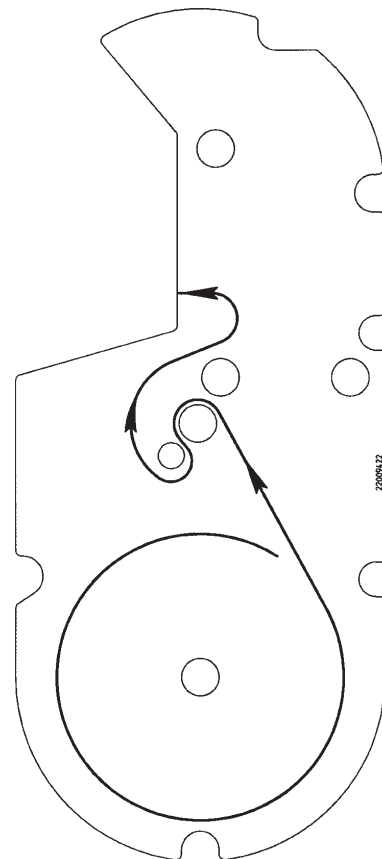

## Exchanging the interchangeable roller in the linerless printer

### Exchanging the interchangeable roller

- Open the printer door.
- Release the printhead by pivoting it upwards.





- Remove the linerless paper from the roller.








- Grip the middle of the linerless roller and move it outwards while pressing the spring downwards to release the roller.

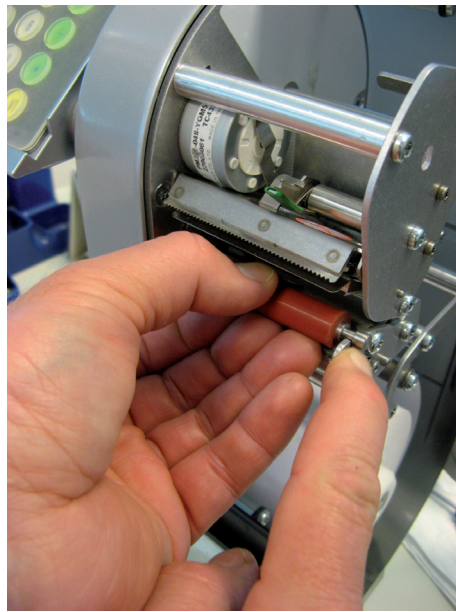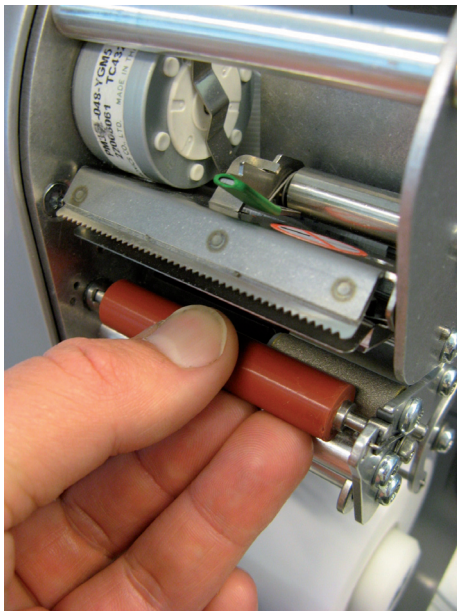


- Slide the roller outwards and move it away over the bracket opening.

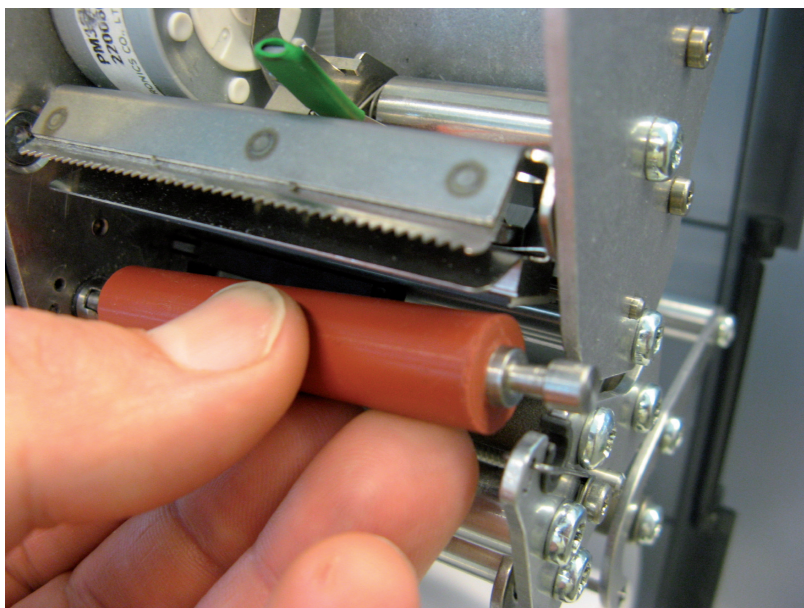




- Centre the inside of the new linerless roller with the studs on the drive assembly and insert it into the bracket opening.

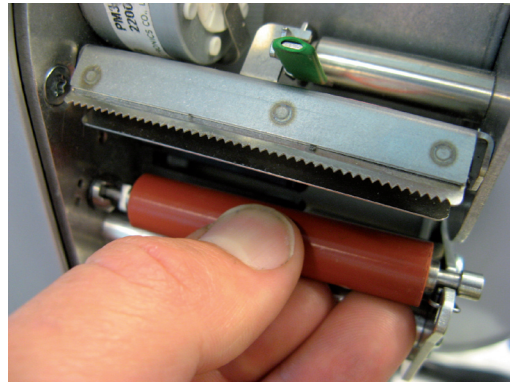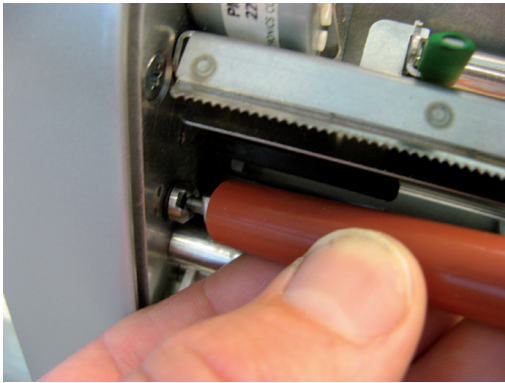

- The spring is automatically pressed downwards.

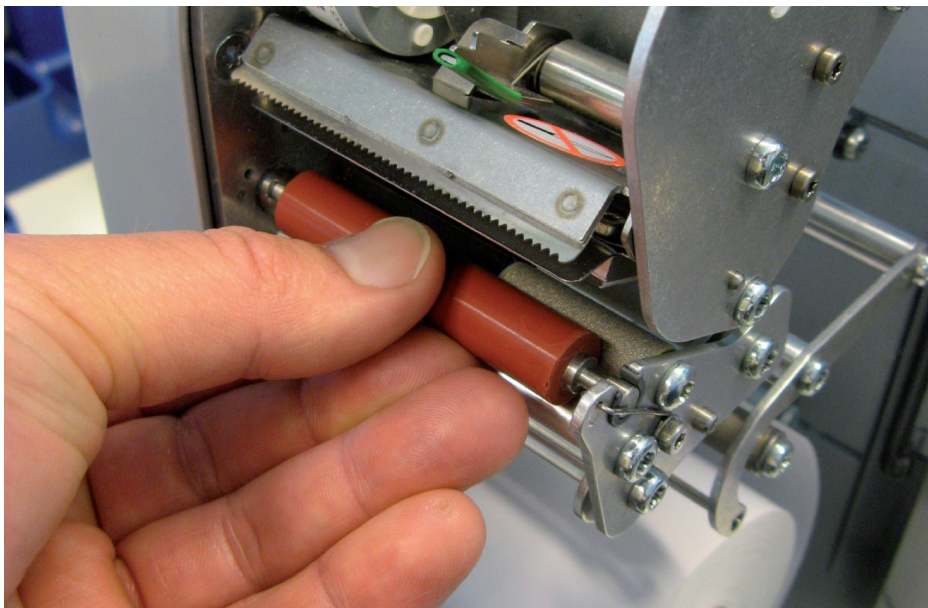


- Press the roller inwards and simultaneously rotate it until the spring locks in place. It should now no longer be possible to slide the roller outwards.

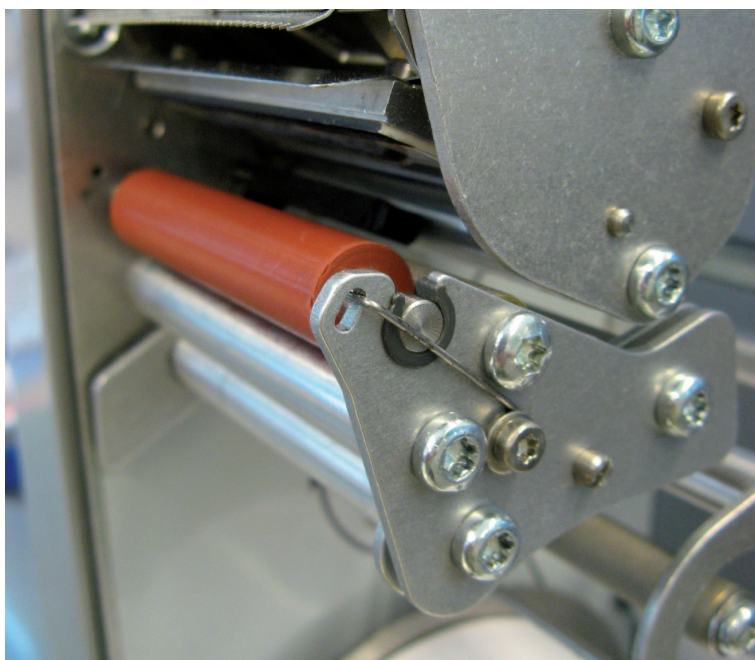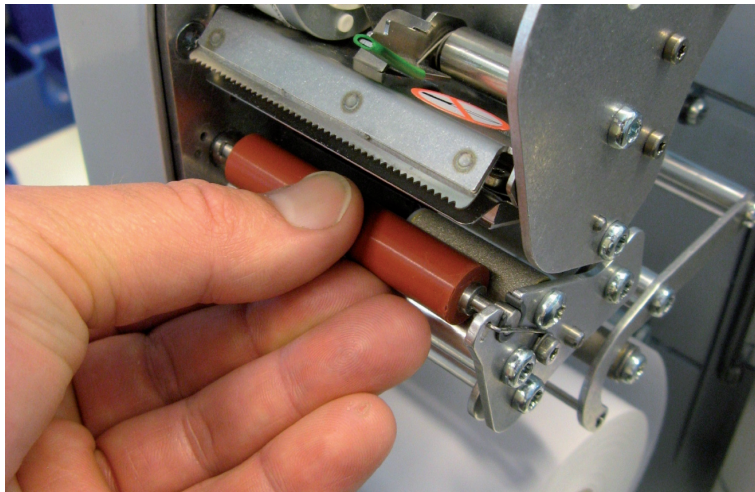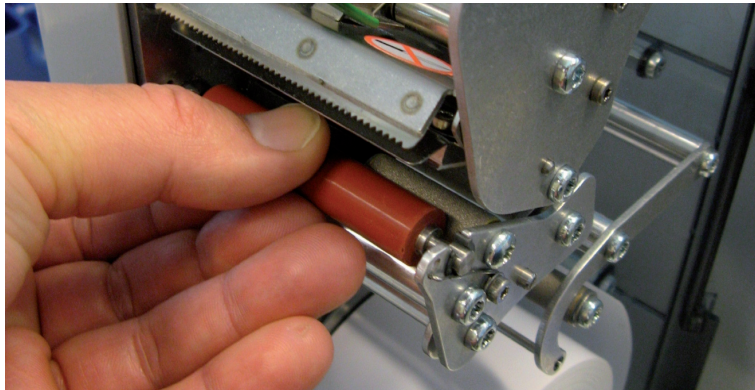

## Counter Service mode

The user interface of all UC3 touchscreen scales can be customised by Mettler-Toledo to meet specific customer requirements. This is why the layout and appearance of your scale's user interface can differ from this depiction.

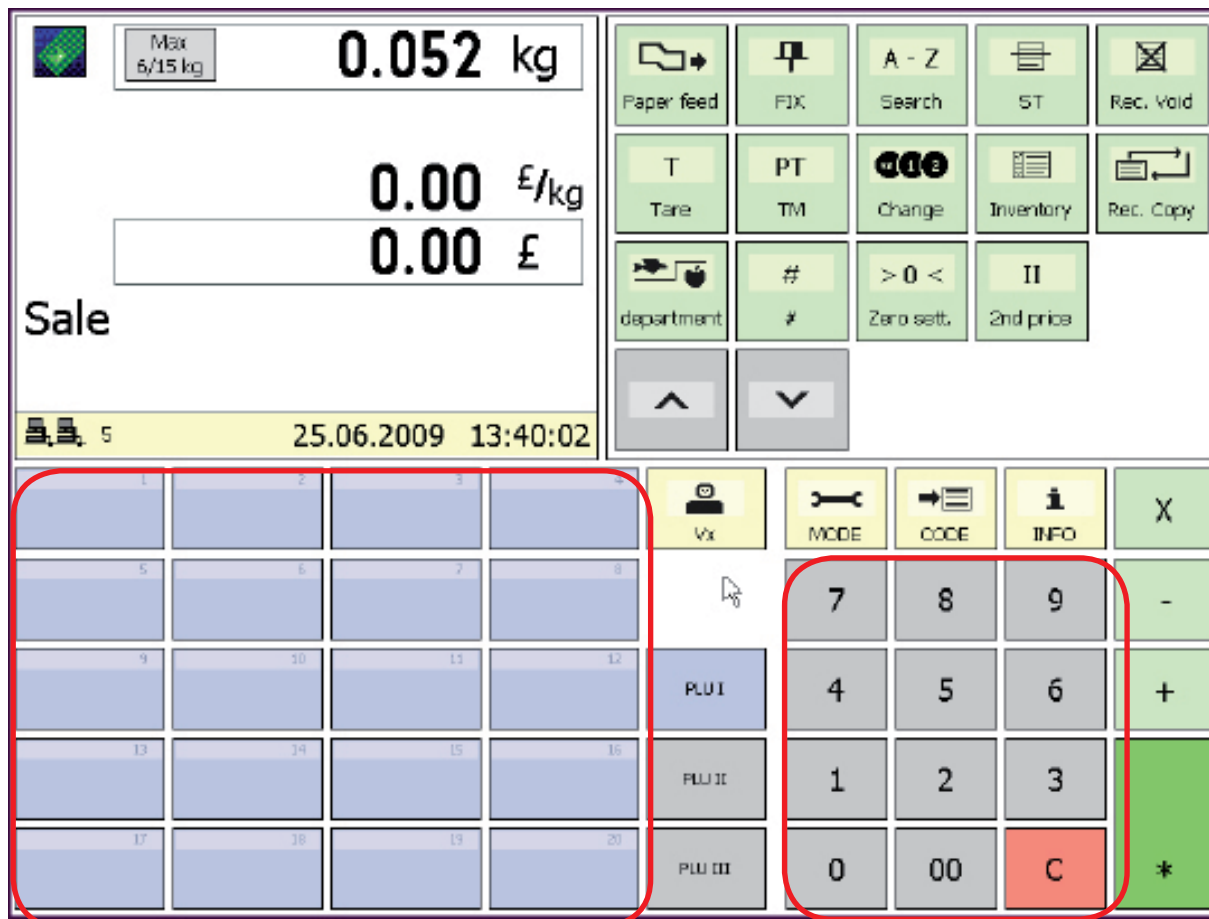


### PLU presets




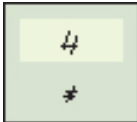

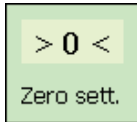
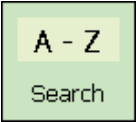
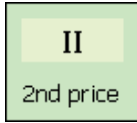




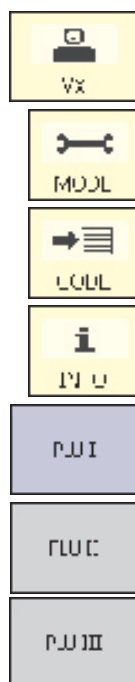




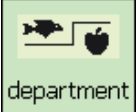
- X Multiplication key
- Manual entry of negative amounts
- + Manual entry of piece prices
- \* Customer total key
- C Clear (delete) key

### Number block



 
- Vx Show operator keys
- MODL Mode change
- CODEL Code change
- INFO Info key
- PLU I 1. Operator side of presets
- PLU C 2. Operator side of presets
- PLU III 3. Operator side of presets

**Function keys**

	Paper feed		Manual entry key
	Price and constant tare key		Zeroing key
	Match Code display		2nd price
	Void key		
	Receipt void key		
	Tare key		
	Manual tare input key		
	Change key		
	Inventory key		
	Receipt reprinting		
	Department key		

**Extended function keys**

A - Z	Searching for articles
Search	

	<div style="border: 1px solid black; padding: 2px; display: inline-block;">                 Max 6/15 kg             </div> <div style="font-size: 24pt; font-weight: bold; margin-top: 5px;">0.052 kg</div>	<p><b>Article</b></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="border: 1px solid gray; padding: 2px; text-align: center;">L / 23 Bierschinken</td> <td style="border: 1px solid gray; padding: 2px; text-align: center;">L / 18 Bugblett</td> </tr> <tr> <td style="border: 1px solid gray; padding: 2px; text-align: center;">L / 44 Brust</td> <td style="border: 1px solid gray; padding: 2px; text-align: center;">L / 12 Bugfiel</td> </tr> <tr> <td style="border: 1px solid gray; padding: 2px; text-align: center;">L / 36 Brustkern</td> <td></td> </tr> <tr> <td style="border: 1px solid gray; padding: 2px; text-align: center;">L / 42 Bug</td> <td></td> </tr> </table>	L / 23 Bierschinken	L / 18 Bugblett	L / 44 Brust	L / 12 Bugfiel	L / 36 Brustkern		L / 42 Bug	
L / 23 Bierschinken	L / 18 Bugblett									
L / 44 Brust	L / 12 Bugfiel									
L / 36 Brustkern										
L / 42 Bug										
<div style="font-size: 24pt; font-weight: bold; margin-top: 10px;">0.00 £/kg</div> <div style="border: 1px solid black; padding: 5px; display: inline-block; margin-top: 5px;"> <div style="font-size: 24pt; font-weight: bold;">0.00 £</div> </div>										
Fleisch / Wurst - D1 department: PLU:	<table style="border-collapse: collapse;"> <tr> <td style="font-size: 12pt; font-weight: bold; padding-right: 5px;">1</td> <td style="padding-right: 5px;">Brust</td> </tr> <tr> <td style="font-size: 12pt; font-weight: bold; padding-right: 5px;">B</td> <td style="padding-right: 5px;">Brustkern</td> </tr> </table>	1	Brust	B	Brustkern					
1	Brust									
B	Brustkern									


A	B	C	D	E	F	G	7	8	9	
H	I	J	K	L	M	N	4	5	6	
O	P	Q	R	S	T	U	1	2	3	
V	W	X	Y	Z	-		0	00	C	*

Searching begins as soon as the first letters of the article name are entered. The articles found are listed alphabetically in their own dedicated keys that are simply selected by pressing them.




# Display

## Operator side

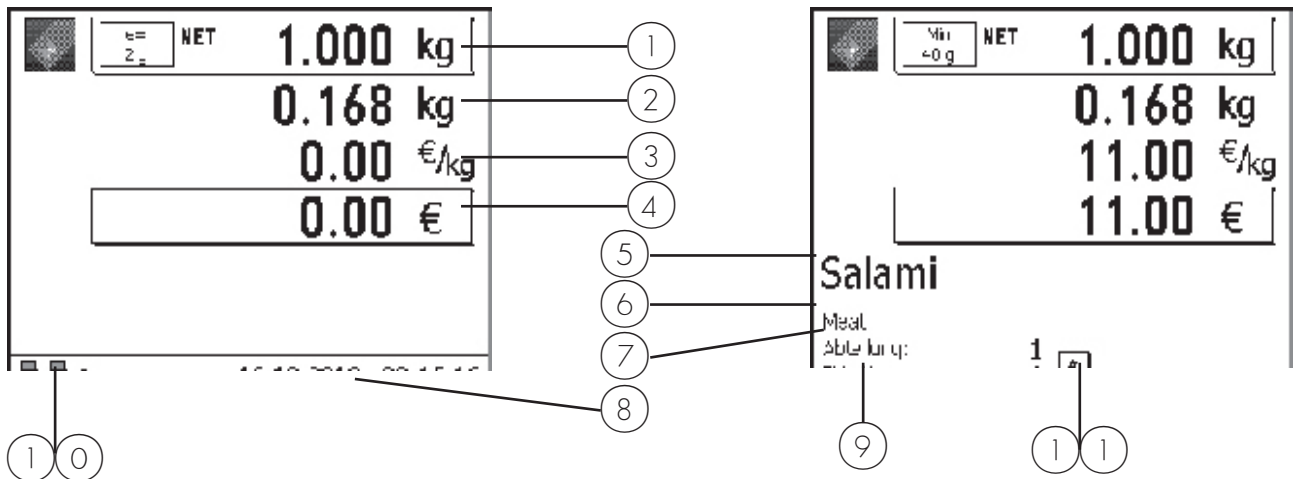

## Customer side

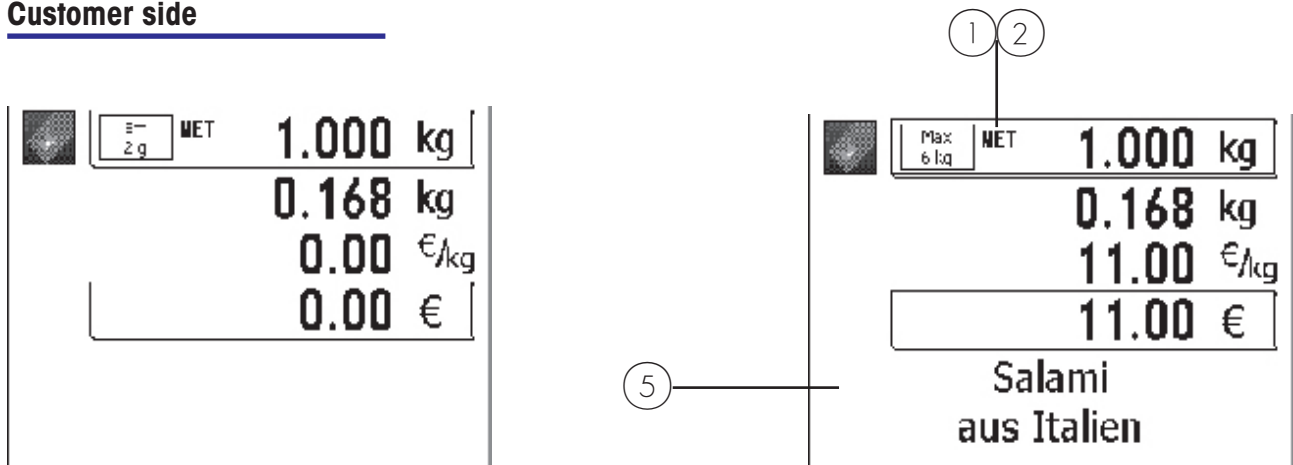

- |                 |                                  |
|-----------------|----------------------------------|
| ① Net weight    | ⑦ Department                     |
| ② Tare          | ⑧ Date/Time                      |
| ③ Unit price    | ⑨ PLU-Nbr.                       |
| ④ Amount        | ①① Scale network status (icon's) |
| ⑤ PLU text      | ①② Tip icon                      |
| ⑥ Article group | ①③ Net display                   |



**Meaning of the displayed icon's:**



- no floating clerk has been configured
- operators are registered locally (icon without network connection)
- floating clerk may be configured in menu 812.



- floating clerk has been configured / floating clerk group 1
- floating clerk server is active (icon at the right)
- floating clerk active (icons with network connection)




- floating clerk has been configured / floating clerk group 1
- floating clerk server is interrupted (icon at the right crossed)
- floating clerk is interrupted and shifts to local operation at next booking




- floating clerk has been configured / floating clerk group 1
- floating clerk server is interrupted (icon at the right crossed)
- floating clerk is interrupted -> local operation active (icons without network connection)
- Operators have to be registered locally!



- floating clerk has been configured / floating clerk group 1
- floating clerk server is active (icon at the right)
- floating clerk is not active -> local operation active (icons without network connection)
- Operators are still registered locally
- floating clerk is reactivated by restarting the operating application (2 x  - key).



- Indicator for errors
  - Call-up tip with the  - key
- e.g.:

Warnings  
 Floating clerk server not reachable  
 Temporarily logged in at local server



- Data transfer is running
- to TAF server
- to floating clerk server

## General

---

### Info about next possible key

---



The information key can be pressed at any time.



- The next logical operation steps can be displayed with the information key.
- Press Function key

### Printout of code functions and program versions

---



Information concerning application and software



- Press Code key



- Press Asterisk key
- The scale returns to the mode Sale after printout



Printout is carried out

### Query of operator memories

---



Information concerning the assigned operator memories



- Press code key



- Press information key



- Press code key



Indication of assigned operator memories



Back to mode Sale

 
### Adjustment of display contrast



Adapt contrast of the display to the environmental conditions.



- Press code key



- press plus or minus key



- Press plus or minus key



- Press plus or minus key




Adjust contrast of both sides.

Adjust contrast of operator side.

Adjust contrast of customer side.



Display contrast

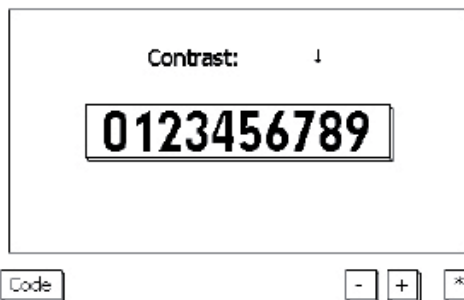

- Press asterisk key



Save settings and back to mode Sale.

### Accompanying receipt


Min	0.320 kg	
100 g		
	0.000 kg	
	99.99 €/kg	
	32.00 €	
Masswert	J.72. g	U t4
Plus Handergabe		12.50
Landager		1.111
Min. s Handergabe		11.25
Handl. nach Min. aus eigener	J.32. g	10.111



Display of the current bookings of an operator.

Configuration in **Mode 812, Tab Data 2**

### Modification of priority department

 Use Plu's of another department.



- Press code key



bis

- Scroll key

Code A xxx A Priority department

Code A xxx A Priority department



Select



- Asterisk key



Department must exist

e. g.



- Enter number of new department



Confirm



- Asterisk key

### Priority price



#### Use 2nd price of

all Plu's.




- Press code key



- Press 2nd price key



Special function key active

 Switch back to PLU Price 1 with the same key sequence

### Quick Service



Bookings are made



PLU entry only via the PLU fix keys

without pressing an operator key.



- Press code key



- Press PLU fix key



User interface on the display.



- Select operator key



Only this operator key is active.

 


Switch back to normal Sale

### Switching to another application



- Press mode key




- Scroll keys



Select menu



- Press Asterisk key

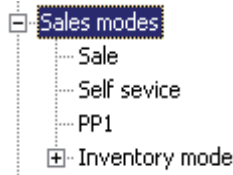

Confirm selection.

### Set date and time



- Press mode key




Mode menu is displayed.



- Scroll keys




Select login

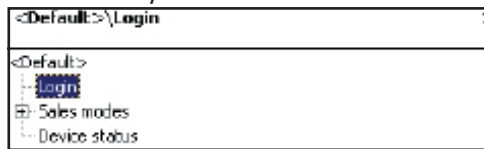

- Press asterisk key



Confirm selection.

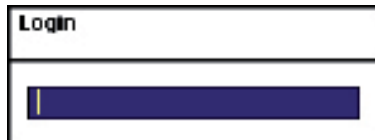

- Enter number



- Press asterisk key



Confirm entry.



- Enter number




Menu number



- Press asterisk key



Confirm entry.

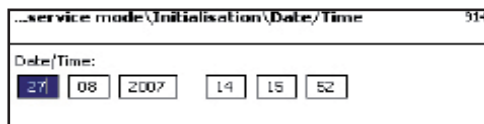

Shift to next field with the or key.



- Press asterisk key



Confirm entry.


## Operation

### with weighing and piece PLU's


#### Weighing PLU or piece PLU with PLU-number

① ② ③



√

- Place goods to weigh on weighing platform  only in case of weighing PLU
- Enter PLU-number
- Book with your
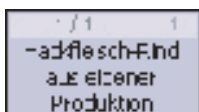
#### Weighing PLU or piece PLU with PLU direct key




√

- Place goods to weigh on weighing platform  only in case of weighing PLU
- Press PLU direct key  Direct key created
- Book with your operator key
- further bookings

#### Weighing PLU with free unit price entry (configurable)

or ① ② ③

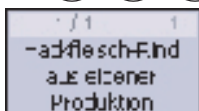



#

price


① ② ③ ⑨

√

operator key


- Place goods to weigh on weighing platform
- Enter PLU-number
- Press PLU direct key
- Introduction of new unit entry  Function key configured and activated.
- Enter new unit price  PLU released for a unit price modification. **(in the data maintenance)**
- Book with your

**Weighing PLU with manual entry of weight (bulk sales)**

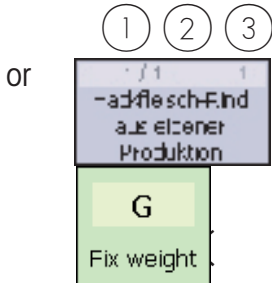


- Enter PLU-number
- press PLU direct key
- Initiation of weight entry

special function key configured

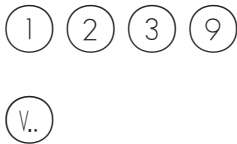

- enter new weight
- Book with your operator key

**Weighed and non-weighed PLUs from another department**

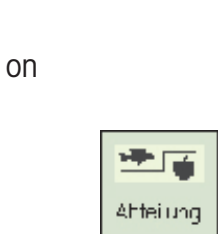


- Place items to be weighed on scale platter

Only for weighed PLUs



- Enter PLU number

 If special function key is configured



- Press PLU preset

If special function key is configured




- Press Department key

E.g. ber

- Enter new department number

## Weighing PLU or piece PLU with product tip

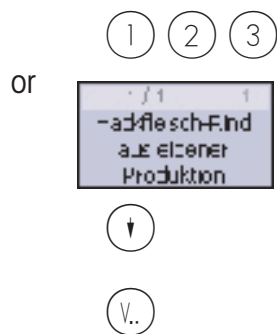

- Place goods to weigh on weighing platform



only in case of  
weighing PLU

- Enter PLU-number

- press PLU direct key

- Indication of PLU product tip



Product tip created

- Book with your operator key


- further bookings



Product tip is printed




### Weighing PLU and piece PLU with assigned 2nd price

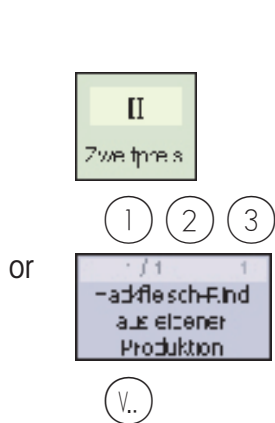

- Place goods to weigh on weighing platform
- Call up 2nd price of PLU
- Enter PLU-number
- press PLU direct key
- Book with your operator key
- further bookings

- only in case of weighing PLU
- 2nd price created, key activated and released


### Select weighing PLU and piece PLU with SHIFT key

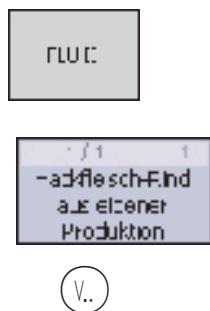

- Place goods to weigh on weighing platform
- Call up 2nd assignment of a PLU direct key
- PLU direct key
- Book with your operator key
- further bookings

- SHIFT key activated

### Piece PLU multiplication

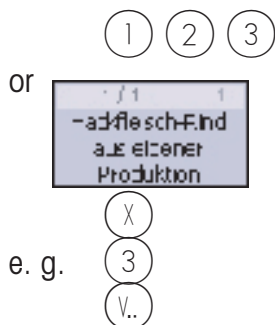

- Enter PLU number
- press PLU direct key
- Multiplication key
- Enter multiplication factor
- Book with your operator key
- further bookings


- max. 99


# Operator service
 
## with free entries

### Weighing with unit price entry

weigh on weighing platform




- Place goods to
- Initiation of unit price entry  Function key active
- Enter new unit price
- Book with your


### Weighing with assignment to an article group



 entry

e. g.    
group




- Place goods to weigh on weighing platform
- Initiation of unit price entry  Function key active
- Enter new unit price
- Initiation of article group
- Enter number of article
- Book with your


### Manual entry + or -



 manual entry



Enter new unit price


 



operator key


- Initiation of  Function key active

- Book with your

### Manual entry + or - with multiplication

  

 
e. g. 



- Initiation of manual entry  Function key active

- Enter new unit price

- Multiplication key

- Enter multiplication factor  max. 99

- Book with your operator key
- further bookings

# Customer Receipts

## Creation

### Customer subtotal (show and print subtotal)



- Scroll down



- Your operator key



- Your operator key
- further bookings



**"DEPARTMENT SPECIFIC CUSTOMER RECEIPT"**



Display subtotal



Subtotal on receipt

### Customer total (show and print total)



- Customer total key
- Scroll down




- Create customer receipt with your operator key



Click through, display of all totals

### Customer total with change calculation

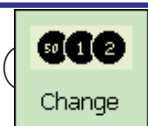

- Change key



Function key active



- Create change calculation with your operator key


e. g. 1 2 0 0

- Enter money given



- Print customer receipt


### Customer total with markup or discount

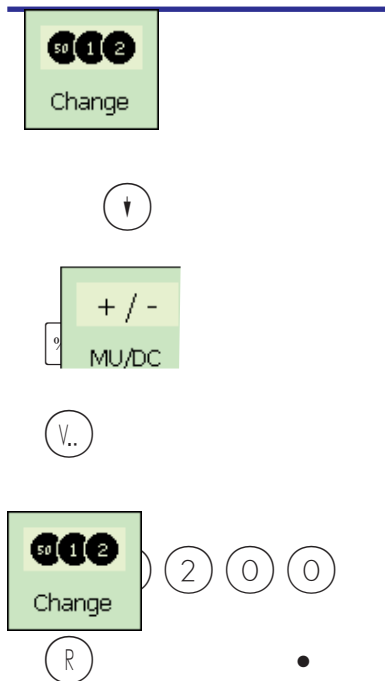

☞ In order to award a markup/discount to a total, it must first be configured in menu »46«.

- Press the Change key
  - Press the arrow down key
  - Press the Markup/Discount preset
  - Press your operator key to enable change calculation
  - Enter amount paid
  - Print receipt
- ☞ If function key is configured
- ☞ Check the total
- ☞ Markup/discount is applied as a percentage (%), or as an absolute amount (€).

### Receipt reprinting

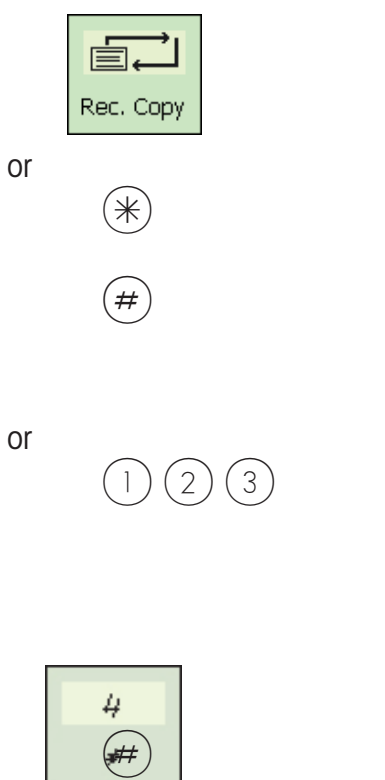

- Press the receipt reprint key
  - Press the total key
  - Press the manual entry key
  - The last receipt is displayed
  - Enter the receipt number
  - The selected receipt is displayed
  - Print the selected receipt
- ☞ Reprint the last receipt.
- ☞ Reprint an older receipt.

### Customer receipt reopening



- Customer total key



- Free entry key

- last created receipt is shown

or



- enter receipt number

- selected receipt is shown




- Receipt is reopened

- further bookings can be made

# Tare

## Types and use

### Tare printout on customer receipt (multiple tare)


 Tare will be printed on the customer receipt and marked with a "T".


Multiple tare means that in case of multiple tare-up (by tare key) the tare values of the single bookings are revealed on the customer receipt at tare printout.

Example: Place weight 0.100 kg, tare --> tare display 0.100 kg  
 Place weight 1.000 kg, book article --> tare printout 0.100 kg  
 do not discharge!  
 Place weight 0.200 kg, tare --> tare display 1.300 kg  
 Place weight 2.000 kg, book article --> tare printout 0.200 kg  
 etc.

### Tare compensation of an empty container




- Place empty container on weighing platform  Weight indication at zero
- Press tare key
- Place filled container on weighing platform

- Select PLU and enter unit price  Tare will be deleted after booking
- and

### Tare fixation for multiple bookings




- Place empty container on weighing platform  Weight indication at zero

- Press tare key
- Fixation key  Fixation of tare and price, **FIX** on the display

- Bookings  Tare and unit price are not deleted
- when



- Fixation key  Fixation of tare and unit price is ab-

### Tare manual entry



- Tare manual key



e. g. (1) (2) (0)

- Initiation of tare manual entry
- Enter tare value in grams



- Confirmation of tare manual entry
- Place filled container on weighing platform



Pay attention to graduation of scale (1g, 2g or Tare value and net weight value are shown.

scale



- Book with your operator key



Tare will be deleted after booking and discharge of



Tare fixation possib-

### Tare memory



- Tare manual key

e. g. (1)

- Call up tare memory Nbr. 1
- Booking



Created in data maintenance



Tare will be deleted after booking and discharge of



Tare fixation possib-



### Tare direct key



- Tare direct key (e. g. 200g)



Direct key created



Tare value and net weight value are shown.

- Booking



Tare will be deleted after booking and discharge of



Tare fixation possible

### Operator tare



- Place empty container on weighing platform

- Press tare key



Weight indication at zero

- Assign to your operator key



Tare value and net weight value

- Booking

are



Tare will be deleted after booking and discharge of

### Plu Tare

Tare which is fixed to a PLU. Has to be created in the **data maintenance** as well

# Operator

## Login and Logoff

### Operator key logoff



The operator key is released during logoff.



- Press Code key

e. g.



- Enter operator number



wish

- Press operator key you wish to logoff



For choose 1;  
for choose 2, etc.

### Operator key temporary logoff



The operator key remains saved during temporary logoff until an operator logs in again.



- Press Code key



- Operator key you wish to logoff

### Operator key login



At login, a personal operator key is assigned to the operator.



- Press Code key

e. g.



- Enter operator number



- Please select an operator key
- To confirm, press the proposed key



For choose 1;  
for choose 2,




If the selected key is already assigned, the scale proposes a free operator key.

# Void

## Types and use

### Void of last item

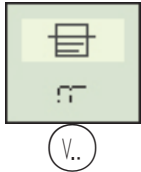

- Press void key
- Your operator key


☞ All bookings are shown. The last booked item is



- Press void key again
- Create further bookings or customer receipt

☞ Highlighted item will be deleted and indicated on the customer receipt

### Void of previous item

 

- Press void key
- Your operator key
- Select item with scroll keys

☞ All bookings are shown.


☞ Item is highlighted



- Press void key again
- Create further bookings or customer receipt


☞ Highlighted item will be deleted and indicated on the customer receipt

## Void of customer receipt


 Receipt voiding takes place in a separate menu




- Press the void key

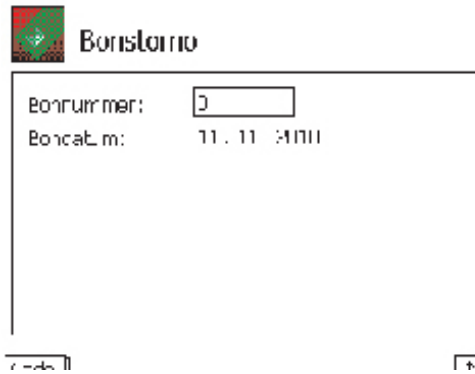


- Enter the receipt number
- Press the Star key

 The number of the receipt you want to void.

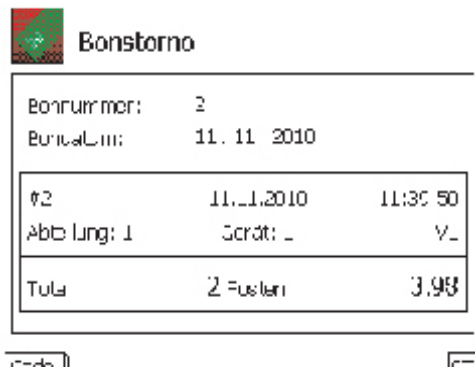


- Press the Void key

 Messages displayed:  
**Receipt will be voided**  
**Receipt is voided**  
 The voided receipt is printed.



 Void the next receipt or press



to return to Counter Service mode.

## Self-Service (Self-S. Mode)

### Operation with symbol keys



- Place goods to weigh on weighing platform
- Press symbol key or number key
- Label is printed
- Remove label and stick it to weighed goods
- Place next goods to weigh on weighing platform



price of the



The weight is shown on the display.

The display shows the article name, unit and end price of the article.

At stable weight of scale.

### Error message "Underload detection"

- Scale emits a continuous beep



or

vice or

"Underload detection" configured, scale detects under-

Solution:  
Zero setting of scale

leaving the self-service application

eliminate cause for underload.



# Functions in the Self-Service mode (180 keys overlay)

The functions can only be selected if the weight display shows zero "0000" or underload "-----".

## Leave Self-S. mode

(or 169)  
key Nbr. 12 immediately  
after each other within 0.5

- Press key Nbr. 1 and key Nbr. 12 immediately after each other within 0.5  
Following selection can be made:  
Sale, Self-Service, Inventory, Data maintenance, price change, turnover evalu-

## Sensor adjustment

(or 169)  
key Nbr. 144 immediately after each other

- Press key Nbr. 1 and key Nbr. 144 immediately after each other  
In case of error messages related to the label.  
e.g.: *WRONG LABEL*

## Primary tare off/on

(or 169)  
key Nbr. 156 immediately after each other

- Press key Nbr. 1 and key Nbr. 156 immediately after each other  
Tare is valid for **all** articles  
e.g.: same container.

## Zero setting

(or 169)  
key Nbr. 168 immediately after each other

- Press key Nbr. 1 and key Nbr. 168 immediately after each other  
Apply if weight indication of scale does

## Label feed

(or 169)  
key Nbr. 180 immediately after each other

- Press key Nbr. 1 and key Nbr. 180 immediately after each other  
Empty label is pushed out; apply for example


Function key "Nbr. 1"	1	2	3	4	5	6	7	8	9	10	11	12	Leave Self-S. mode "Nbr. 12"
	13	14	15	16	17	18	19	20	21	22	~	24	
	25	26	27	28	29	30	31	32	33	34	35	36	
	37	38	39	40	41	42	43	44	45	46	47	48	
	49	50	51	52	53	54	55	56	57	58	59	60	
	61	62	63	64	65	66	67	68	69	70	71	72	
	73	74	75	76	77	78	79	80	81	82	83	84	
	85	86	87	88	89	90	91	92	93	94	95	96	
	97	98	99	100	101	102	103	104	105	106	107	108	
	109	110	111	112	113	114	115	116	117	118	119	120	
	121	122	123	124	125	126	127	128	129	130	131	132	
	133	134	135	136	137	138	139	140	141	142	143	144	Sensor adjustment "Nbr. 144"
	145	146	147	148	149	150	151	152	153	154	155	156	Primary tare off/on "Nbr. 156"
	157	158	159	160	161	162	163	164	165	166	167	168	Zero setting "Nbr. 168"
Function key "Nbr. 169"	169	170	171	172	173	174	175	176	177	178	179	180	Label feed "Nbr. 180"

# Functions in the Self-S. Mode (100-keys overlay)

The functions can only be selected, if the weight indication shows "Zero **"0000"** or underload "-----".


## Leave Self-S. mode

(or 91) and  
Nbr. 10 immediately after  
each other within 0.5

- Press key Nbr. 1 key  Following selection can be made:  
Sale, self-service, inventory, data maintenance, price change, turnover evaluation

## Sensor adjustment

(or 91) and  
Nbr. 70 immediately after  
each other within 0.5

- Press key Nbr. 1 key  In case of error messages related to the label.  
e. g.: *WRONG LABEL*

## Primary tare off/on

(or 91) and  
Nbr. 80 immediately after  
each other within 0.5

- Press key Nbr. 1 key  Tare is valid for **all** articles  
e. g.: same container.


## Zero setting


(or 91) and  
Nbr. 90 immediately after  
each other within 0.5

- Press key Nbr. 1 key  Apply if weight indication of scale does

## Label feed

(or 91) and  
Nbr. 100 immediately  
after each other within 0.5

- Press key Nbr. 1 key  Empty label is pushed out; apply for example

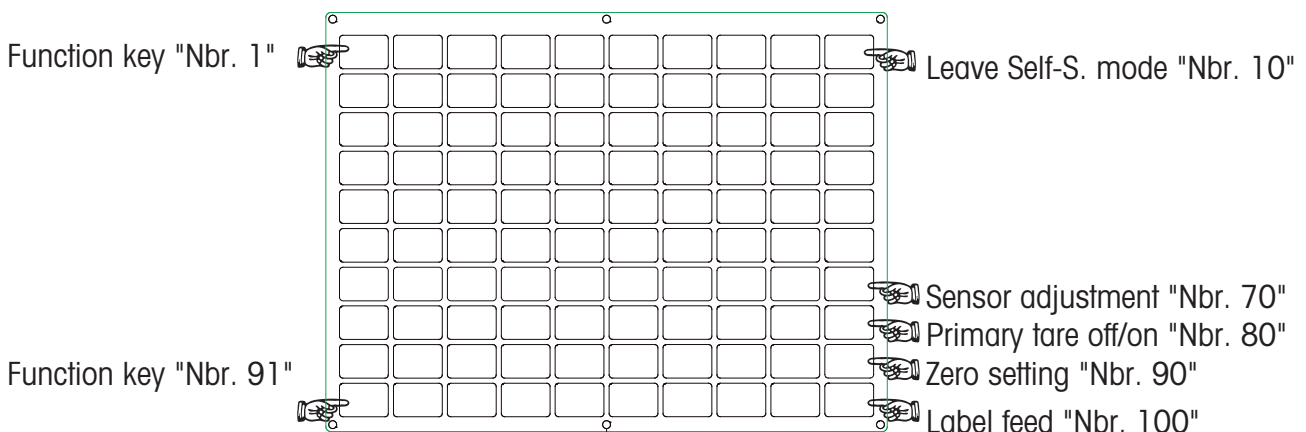




# Functions in the Self-S. Mode (50-keys overlay)

The functions can only be selected, if the weight indication shows "Zero **"0000"** or underload "-----".


## Leave Self-S. mode

(or 46) and  
Nbr. 5 immediately after  
each other within 0.5

- Press key Nbr. 1 key  Following selection can be made:  
Sale, self-service, inventory, data maintenance, price change, turnover evaluation

## Sensor adjustment

(or 46) and  
Nbr. 35 immediately after  
each other within 0.5

- Press key Nbr. 1 key  In case of error messages related to the label.  
e. g.: *WRONG LABEL*

## Primary tare off/on

(or 46) and  
Nbr. 40 immediately after  
each other within 0.5

- Press key Nbr. 1 key  Tare is valid for **all** articles  
e. g.: same container.


## Zero setting

(or 46)  
key Nbr. 45 immediately  
after each other within 0.5


- Press key Nbr. 1 and  Apply if weight indication of scale does


## Label feed

(or 46) and  
Nbr. 50 immediately after  
each other within 0.5


- Press key Nbr. 1 key  Empty label is pushed out; apply for example


Function key "Nbr. 1"

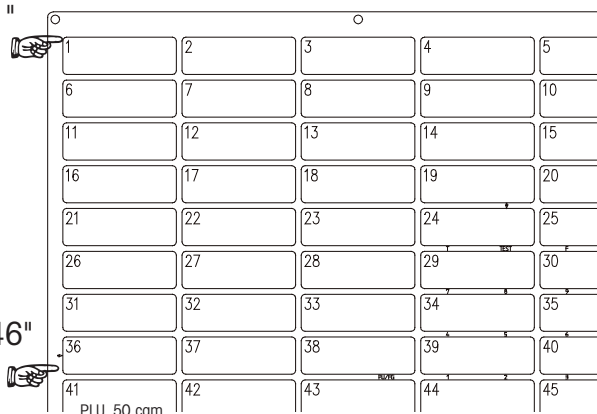

 Leave Self-S. mode "Nbr. 5"

 Sensor adjustment "Nbr. 35"

 Primary tare off/on "Nbr. 40"

 Zero setting "Nbr. 45"

 Label feed "Nbr. 50"


Function key "Nbr. 46"

## Functions in the Self-S. Mode (25-keys overlay)

The functions can only be selected, if the weight indication shows "Zero **"0000"** or underload "**-----**".


### Leave Self-S. mode

(or 21) and  
Nbr. 5 immediately after  
each other within 0.5

- Press key Nbr. 1 key  
 Following selection can be made:  
Sale, self-service, inventory, data maintenance, price change, turnover evaluation

### Sensor adjustment

(or 21) and  
Nbr. 10 immediately after  
each other within 0.5

- Press key Nbr. 1 key  
 In case of error messages related to the label e. g.: *WRONG LABEL*

### Primary tare off/on

(or 21) and  
Nbr. 15 immediately after  
each other within 0.5

- Press key Nbr. 1 key  
 Tare is valid for **all** articles e. g.: same container.

### Zero setting

(or 23) and  
Nbr. 25 immediately after  
each other within 0.5


- Press key Nbr. 1 key  
 Apply if weight indication of scale does

### Label feed

(or 21) and  
Nbr. 29 immediately after  
each other within 0.5

- Press key Nbr. 1 key  
 Empty label is pushed out; apply for example

Function key "Nbr. 1"

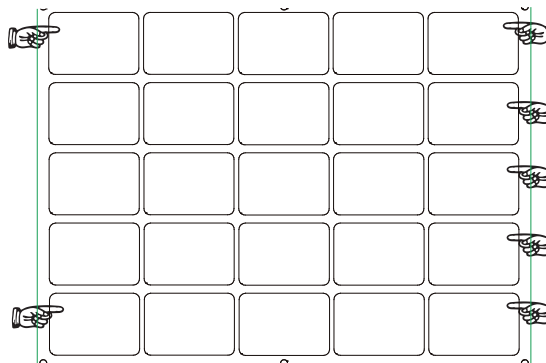

Leave Self-S. mode "Nbr. 5"

Sensor adjustment "Nbr. 10"

Primary tare off/on "Nbr. 15"

Zero setting "Nbr. 20"

Function key "Nbr. 21"

Label feed "Nbr. 25"


## Prepacking




 
### Prepacking:

In the prepacking mode, labels can be created for article labelling.  
Printout activation can be selected manually or automatically.

### Selecting PP mode




- Press the Mode key

 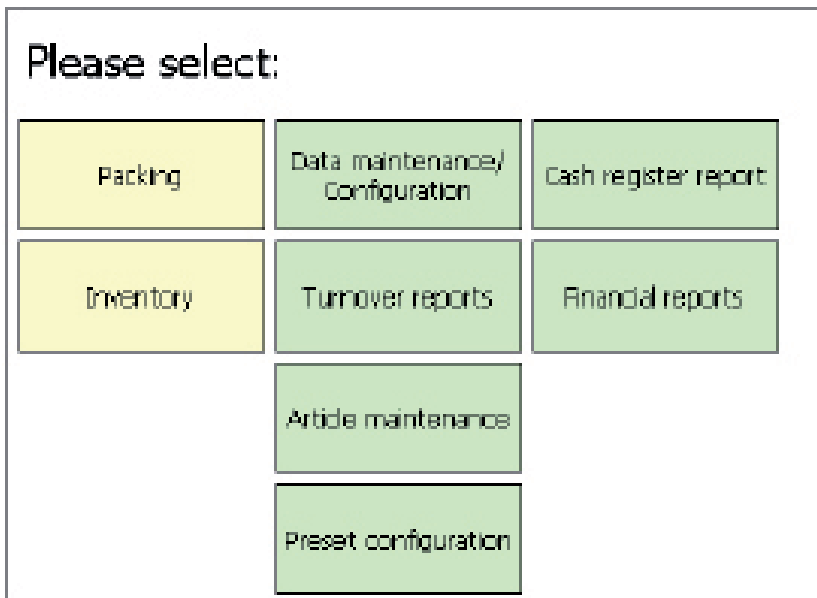

- Press the PREPACK key

## Select mode of operation

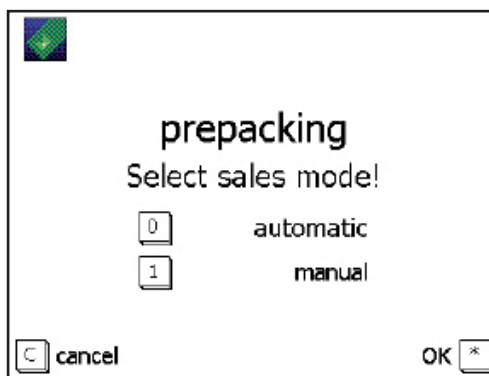

① or ②

- Select

☞ 0 = automatic printing;  
1 = manual printing with the V1 operator key.


③

- Press the Star key

## Prepackaging mode



Label layout key

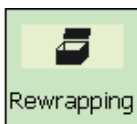

Rewrap mode



Arrow up key




Arrow down key


### Operator Service

① ② ③

- Enter PLU number

 only in case of weighing PLU; further possibilities refer to page 20 cont.


- Place goods to weigh on weighing platform

 only in case of weighing PLU



- Press operator key V1

In case of manual activation: in case of automatic activation, the printout is carried out at stable weight of scale.


 In the automatic printout mode the label has to be requested manually with an operator key for printing a piece PLU or for a manual price entry.

### Non-weigh articles

#### (Repeat labelling)

① ② ③

- Enter PLU number

 Or press a PLU preset.

⊛

- Press the Star key

To confirm

#### Rostbraten

Fleisch / Wurst		Trägerformel:	Nein
Abteilung	1		
PLU-Nr.:	2	<input type="checkbox"/>	<input type="checkbox"/>

0 = Liner; 1 = Labels

①

- Labels

⊛

- Press the star key

To confirm

#### Rostbraten

Fleisch / Wurst		Etiketten:	7
Abteilung	1		
PLU-Nr.:	2	<input type="checkbox"/>	<input type="checkbox"/>

⑦

- Enter the number of labels

E.g. Print seven labels for the selected non-weigh article.

⊛

- Press the Star key

The selected number of labels are printed.

## Label layout key


☞ The label layout key allows you to select another label layout, e.g. to obtain shorter labels, or if you need less information on the labels resp. short term endless labels, or for variable label lengths.

Conditions: label layout key configured; **menu item 833 keyboard configuration**  
 label layout created; **menu item 8312 label layout (Name#1.xml)**




- Press the label layout key ☞ Press repeatedly to change.

Label layout symbol

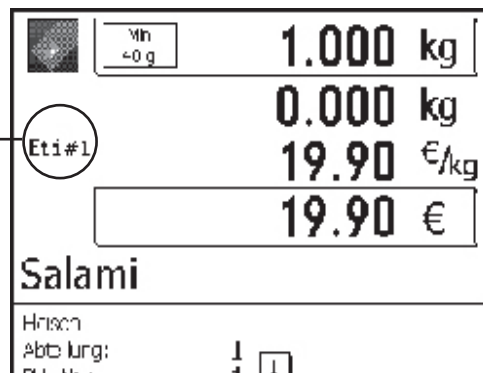

① ② ③

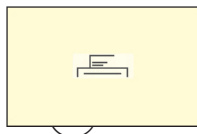


- Enter PLU number
- Place items to be weighed on the scale platter
- Press the print key ☞ For manual printing.
- More labelling

### Date key

The date key allows you to modify the different dates (packing date, sell date or best before date) for the next labelling.

Conditions: Date key configured; **menu item 833 keyboard configuration**

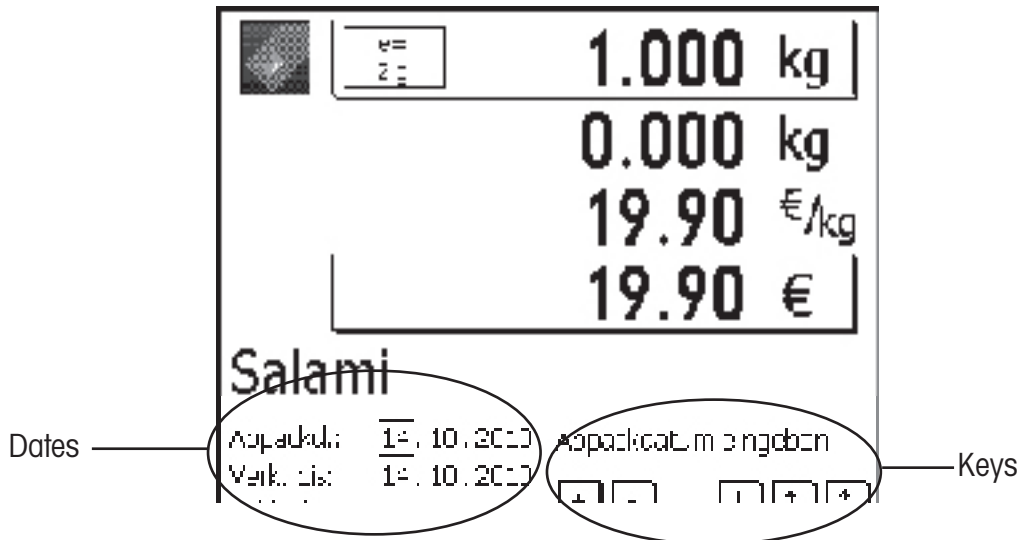

- Enter PLU-nummer or manual entry.
- Place goods to weigh on weighing platform only in case of weighing PLU
- Date key Modify date. Modification applies to this labelling only.
- Select date, modify
- Press operator key V1 Confirm modifications

Manual activation if selected. Label is printed.

### Leave PP- Mode




- Press mode key Quick exit with 21. Change to the mode Sale




## Rewrapping


The Rewrap key allows you to re-label an already labelled item with a new label (for example, if the original label is soiled or no longer readable). Sales amounts are not stored.

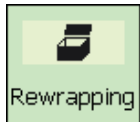

- Press the rewrap key

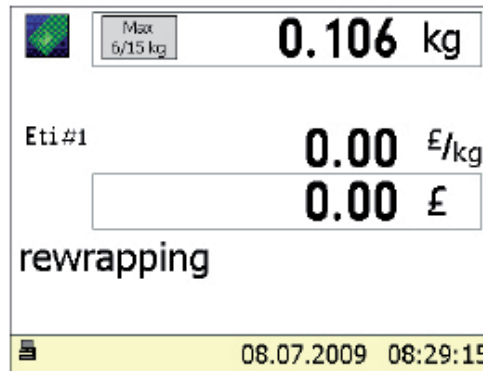



① ② ③

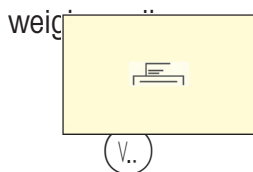

- Enter PLU number
  - Place items to scale platter
  - Press the print key

Only for manual printing.

## Leaving PP mode

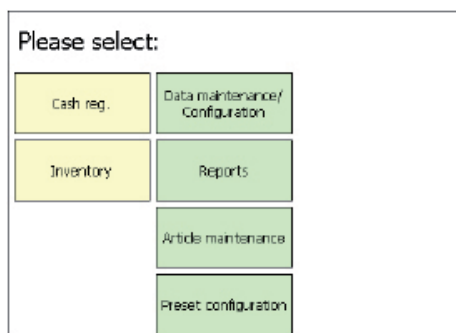 

- Press the mode key
- Select another mode



# INVENTORY



 
**INVENTORY:**

Inventory control of the articles available in the counter (backweighing). Booking of an article is documented automatically in the accompanying inventory report. Printout of the inventory report is indicated as "INVENTORY".



Inventory can be interrupted via mode shift (selection of a different mode) and continued (own total memory) at any time.

Quit inventory mode via the MODE - key, select operator mode or PP-mode.

## Selecting Inventory mode



- Press the Mode key

 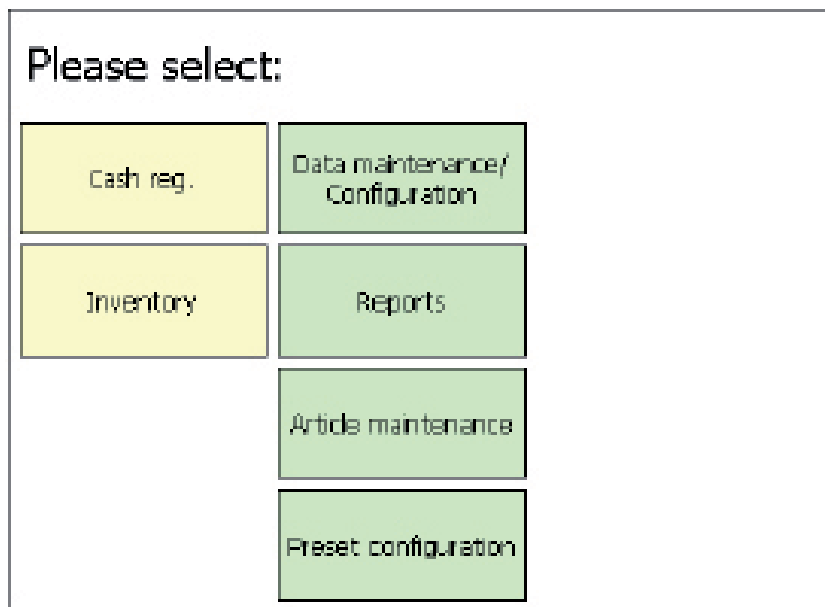

- Press the Inventory key

## Inventory mode

	Min 40 g	<b>0.106 kg</b>		Paper feed		FIX		A - Z Search
		<b>0.00</b> £/kg		T		PT		> 0 <
		<b>0.00</b> £		Tare		TM		Zero sett.
				department		#		II
				#		#		
				↑		↓		
Inventory								
08.07.2009 08:33:56								
1	2	3	4			MODE		CODE
5	6	7	8		7	8	9	-
9	10	11	12	PLU I	4	5	6	+
13	14	15	16	PLU II	1	2	3	
17	18	19	20	PLU III	0	00	C	*

	Min 40 g	<b>0.106 kg</b>		Paper feed		FIX		A - Z Search
		<b>99.99</b> £/kg		T		PT		ST
		<b>10.60</b> £		Tare		TM		
				department		#		
				#		#		
				↑		↓		WG art. group
								G Fix weight
Hackfleisch-Rind								
Fleisch / Wurst - D1								
department: 1								
PLU nbr.: 1								
								INFO
								X
					7	8	9	-
					4	5	6	+
					1	2	3	
					0	00	C	*

Inventory bookings


**Inventory process**

① ② ③




- Enter the PLU number  Operation is the same as in Selling mode.

- Place items to weigh on the scale platter

- Press the Inventory key  Book items.

- More bookings

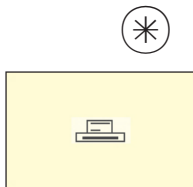

- Press the Star key  The total is shown.


- Press the Inventory key  A slip marked INVENTORY is printed.

 Operation is the same as in Selling mode.

# Mode key

## Start of the NonSalesMode or

## Selection of a sales mode

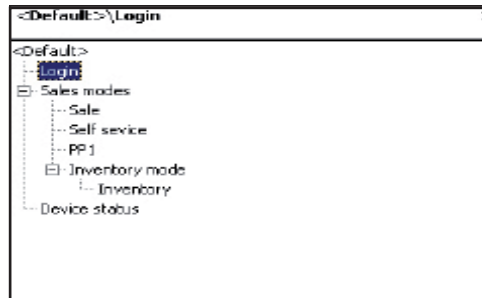


Login:.....





## Sales modes

.....Sale

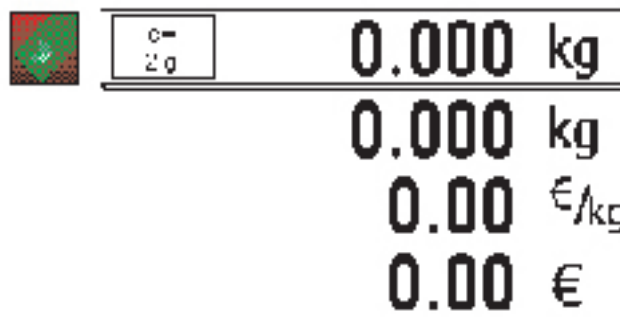

**Self-Service**.....

Self-Service by the customer

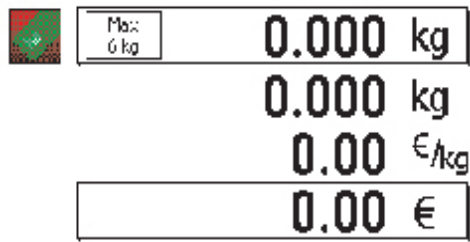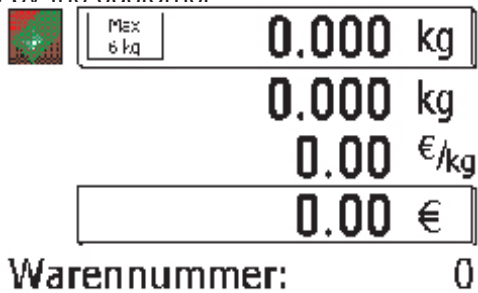


**Ware auflegen**

Enter article number

**Ware auflegen**

Press a pictogram key

**PP1**.....

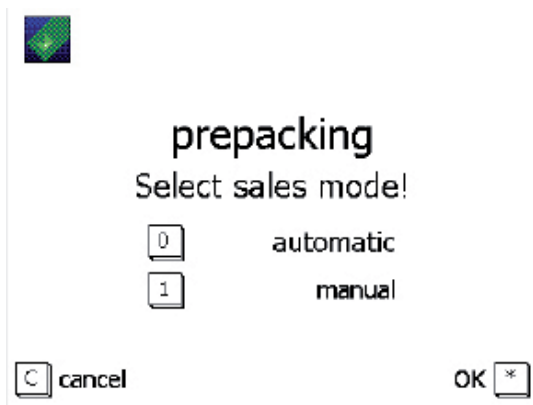

**automatic:**.....

Printout activation is carried out at stable weight of scale

①

- Figure 1



automatic printout activation.

①

- Figure 0




manual printout activation.

⊛

- Asterisk key




Confirm selection.

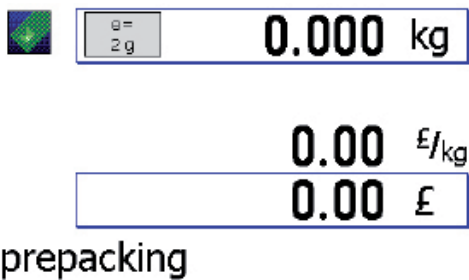

27.08.2007 14:53:30


**Inventory** .....  
Inventory control

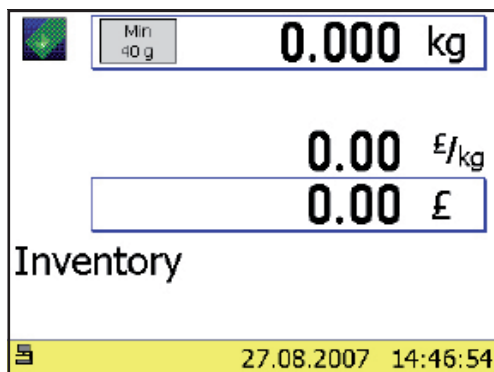



# Non Sales Mode

 
## Starting



Data maintenance/  
Configuration

Press Mode, Data maintenance/Configuration followed by 1 and \*.

<Default>\Login 1

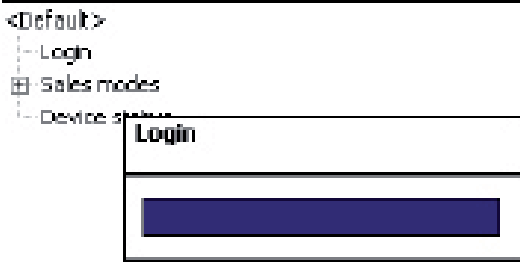


Enter the code number via the keyboard.



• Stern-Taste

Confirm the code number.

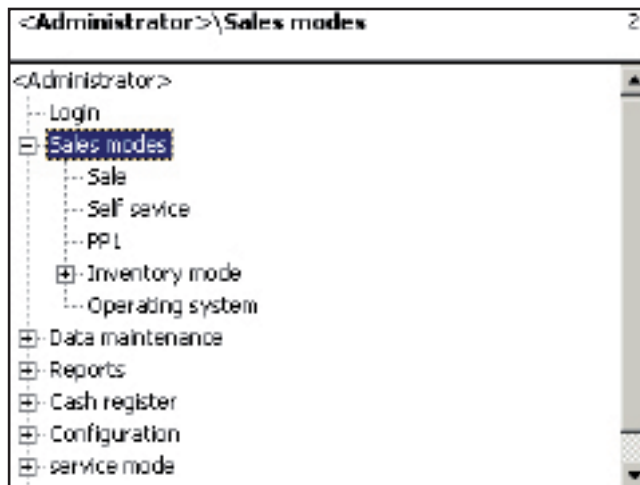


↑ or ↓ key

• Use the arrow keys To select a menu item.


### Menu navigation



 - Mode key - To enter or leave a menu.



 
- Arrow up/arrow down keys - To select a menu item.



- Arrow left/arrow right keys - To show selection options.



 - Star key - To Select/confirm input entry.




- Code key - To select different tabs.

### Quick entry of a menu



**Tip:**

Each menu has its own particular number. To enter a menu, you only need to enter its number after logging on.

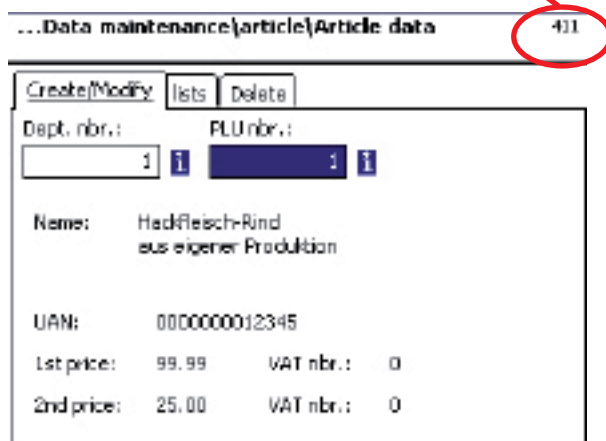

- Press 4 1 1



Data Maintenance/  
Article create, modify, list, delete.

## Code functions




**Note:**

Code functions are functions which can be started with the Code key.




- Code key - Displays the code functions.

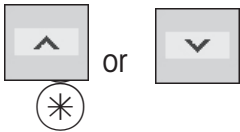

- Arrow up/down - Select a menu item.
- Star key - Confirm selection.

Or, in Weighing mode, press the required key sequence.

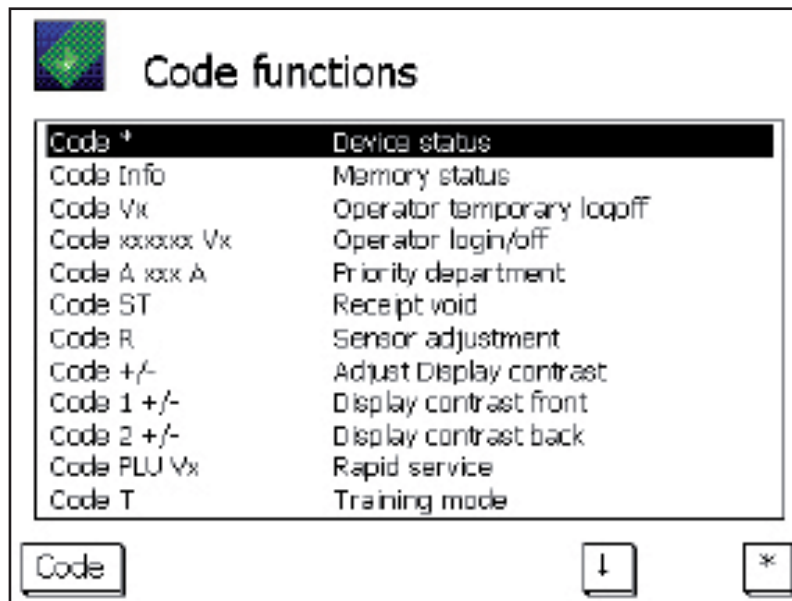


# NonSalesMode (- Data maintenance)

## Article (411)

create, list, delete

### Quick start with 411:

 In this window you may enter the base data of an article or modify the data of an existing article.




Data maintenance/  
Configuration



• Asterisk key



confirm

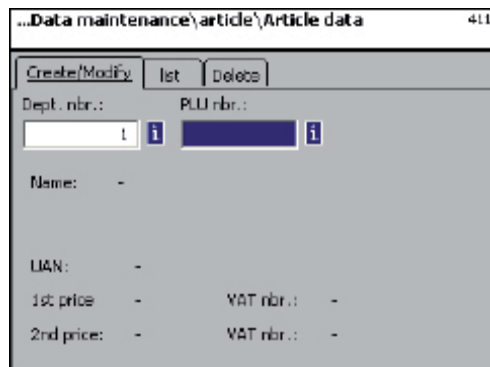

and/or


• Enter PLU-Nbr.



PLU-Nbr. of new article.

• left arrow key

Department number of new article.

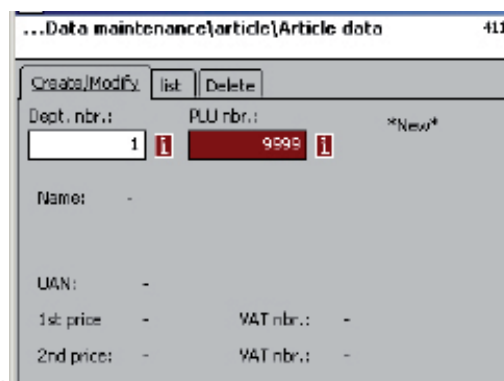

**PLU-Nbr.** max. 6 digits

**Dept.-Nbr.** max. 6 digits;

this information is necessary if the new article has to be transmitted to all scales in this department.



• Asterisk key



confirm



An empty field for entries appears.

### Entries tab "Data 1":

**1st price:** Sales price 1, this price is always needed for selling. Note: This price is linked to the value added tax rate VAT 1 in order to calculate the VAT share of the article turnover. Every article may have two sales prices which can be selected via the keyboard of the scale (cash register) while selling.

**VAT Nbr.:** Value added tax number for price 1. In this field, the VAT-Nbr. of the VAT-rate (e. g. 7%) which should be valid for this article has to be entered. A corresponding VAT-table containing the desired VAT-number with its appropriate VAT-rate, e. g. Nbr. 1 = 7% (refer to **VAT**, page ##) must have been created. This entry is necessary only if the VAT turnover share is required.

**UAN :** Max. 13 digits; in case less than 13 digits are entered, the missing digits are preceded by leading zeros. The entry is only necessary for instance if the article number in the EAN of a prepacking article has to be encrypted.

**2nd price:** Sales price 2, this price is only needed if several sales prices are to be used. This is always the case if the same article must be taken into account in the turnover with different VAT-rates, e. g. an article as a food article and as a snack article. Note: This price is linked to the value added tax rate VAT 2 in order to calculate the VAT share of the article turnover.

**VAT Nbr.:** Value added tax number for price 2. In this field, the VAT-Nbr. of the VAT-rate (e. g. 15%) which should be valid for this article has to be entered. A corresponding VAT-table containing the desired VAT-number with its appropriate VAT-rate must have been created.

**AtGp-Nbr.:** Article group for this article. Entry necessary.

**Tare Nbr.:** In this field, the Tare-Nbr. of the tare value (e. g. 4 grams) which should be valid for this article has to be entered. A corresponding tare table containing the desired tare number with its appropriate tare weight must have been created.

**Name:** Article description with a maximum of 100 characters.



- Code key



Shift to Tab Data 2.

**Entries at tab "Data 2":**

**Short text:** short form of the article text with max. 20 digits, printout on receipt and labels if created.

**Purchase price:** Purchase price of article.

**Customer ID:** Shelf number resp. storage location of the article (Self-S. mode)

**Product tip mode:**  
product tip mode:

Auto: Product tip appears on the display. Product tip is shown and printed. The operator decides what to do with the product tip.

tip.

product tip mode:      Text number:

**Text Nbr.:** The product tip number valid for this article has to be entered here. A corresponding product tip table (refer to **Product tip**) containing the desired text number, has to be created.

PLU type:


**PLU type**

PLU type:

**Article by weight:** Weighed article

**Article by piece:**

**Application of the product tip:**

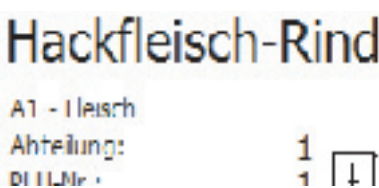

Display with key; if booked now, product tip is printed on customer receipt.


Marking for a PLU with product tip



• Code key




Shift to Tab Data 3.

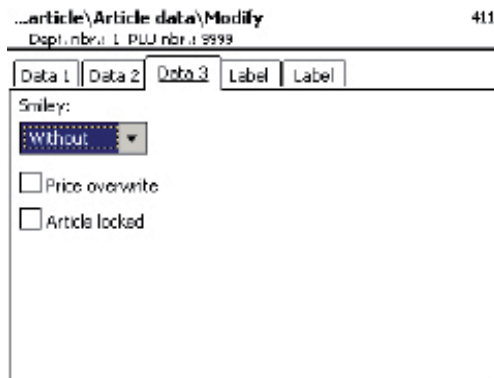

**Entries at tab "Data 3":**

**Smiley:** Information about the articles sales value for the company.

Smiley:

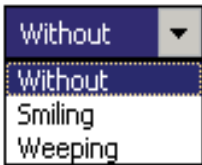

- without:** The smiley function for this article is switched off.
- Smiling:** "Good article" for the company.
- Weeping:** "Bad article" for the company.

**Price overwrite admitted:** The price of the article called up at the scale/cash register can be over-written by another price (call up article, press (#) key and enter new price).


**Article locked:** no sales of this article until release.



- Code key




Switch to tab Label 1.

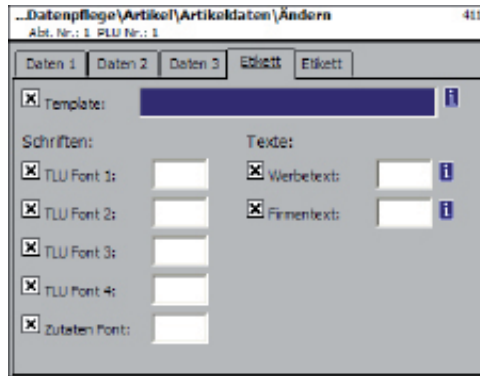

**On the "Label 1" tab:**


**Template:** Created label layouts.

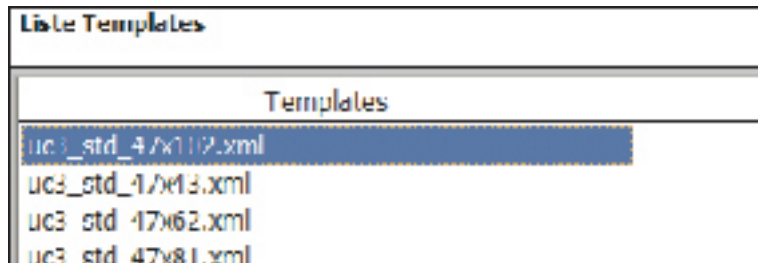


**Fonts:** **TLU font 1 .. 4:** Type (01 .. 101) for TLU lines 1 .. 4.

**Ingredients font:** Type (01 .. 101) for printed ingredients.

**Texts:** **Advertising text:** Advertising text which is printed onto each label.

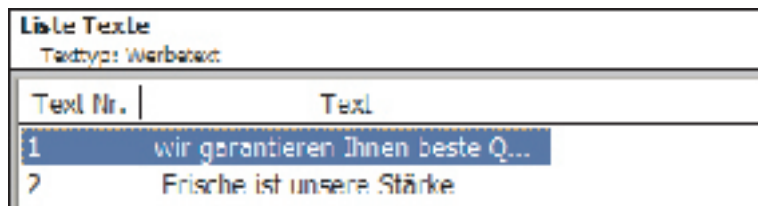

**Company name:** Company name which is printed onto each label.

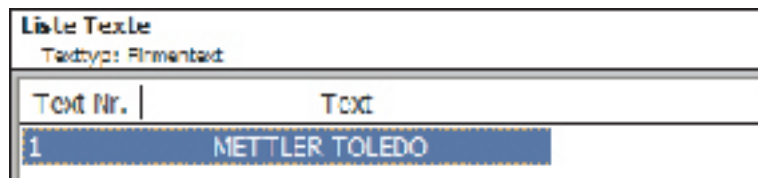

- Press the sSar key



To confirm selection



If this field is shown, you can display the available information in form of a list with the



key and make your choice.





- Code key



Switch to tab Label 2.

**Date texts:**

- Packing date:** Select text.
- Sell before:** Select text.
- Best before:** Select text.

List of texts	
Text type: Date texts	
Text nbr.	Text
1	bis +2°C mindestens haltbar bis:
2	bei +4°C zu verbrauchen bis:
3	zu verbrauchen bis:

**Date format:**

- Packing date:** See "Legend date format"
- Sell before:** See "Legend date format"
- Best before:** See "Legend date format"

**Date offset:**

- Sell before:** Packing date + Nbr. of days.
- Best before:** Packing date + Nbr. of days.

**Barcode:**

Selection of barcode for the PLU.

List of bar codes				
Bar...	Bar cod...	Print	Scan	Definition
1	EAN13	Yes	No	24.A.AAA.CB8B8B

**Fix weight:**

Of an article by piece.




- Asterisk key



Confirm selections.

**List article - Quick start with 411;**

In this window you can consult the article list of a selected department.

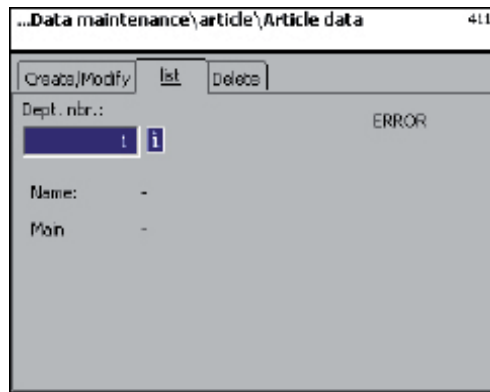


- Enter department number



- Asterisk key



confirm

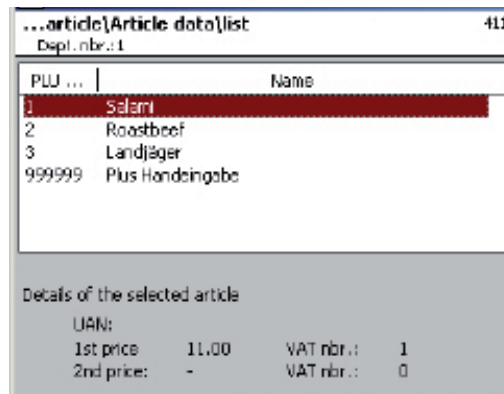

↑ or ↓ key


- Scroll up/down



Scroll in list.

**Delete article - Quick start with 411;**

In this window you can delete an article.

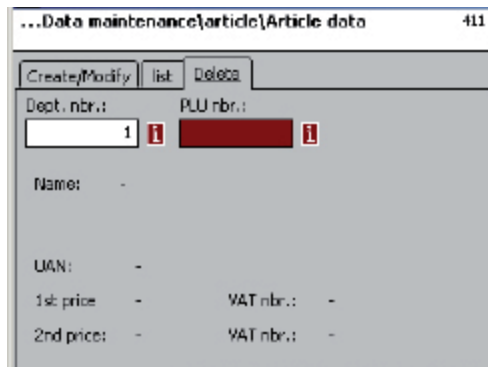

①

- Enter PLU-Nbr.

☞ Enter PLU-Nbr. of the article you wish to delete.

and/or ←


- left arrow key

☞ Enter department number if PLU exists in another department.

☞ Confirm entries.

⌘

- Asterisk key

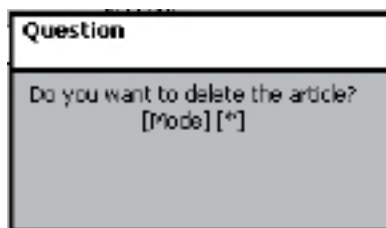

⌘

- Asterisk key

 
☞ Confirm deletion; the article will be deleted.

or

MODE

- Mode key

☞ Cancel operation.




Data maintenance/  
Configuration

### Special offers (412)

#### create/modify, delete article by special offer

#### Quick start with 412:

Article price changes can be grouped in special offer schedule lists here. These special offers are activated at a specific start date and automatically reset to the normal sales price at a predefined end date.

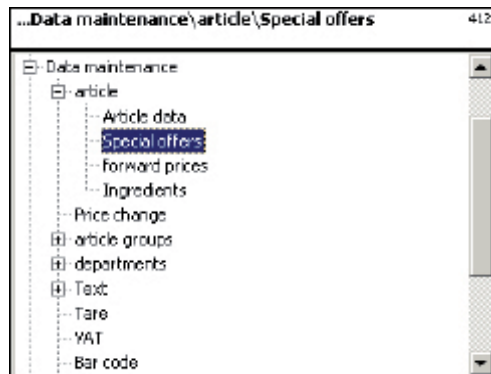

- Asterisk key



confirm



- Enter special offer number



Nbr. of new special offer.



- Asterisk key



confirm

**Name:** Enter description of special offer.

**Start date:** Date at which a special offer will be activated.

**End date:** Date at which a special offer will be closed.

**Receipt text:** Text printed on the customer receipt (max. 20 characters).



- Asterisk key



confirm



- Code key



Shift to Tab 2.



- Enter special offer Nbr.



Nbr. of new special offer.



- Asterisk key



confirm



**Entries tab "Create/Modify":**


**Dept. Nbr.:** Enter department Nbr. of PLU.

**PLU-Nbr.:** Enter PLU-Nbr.


**Name:** Article description

**UAN:** EAN-Code

**Indication whether selected PLU is contained in special offer.**

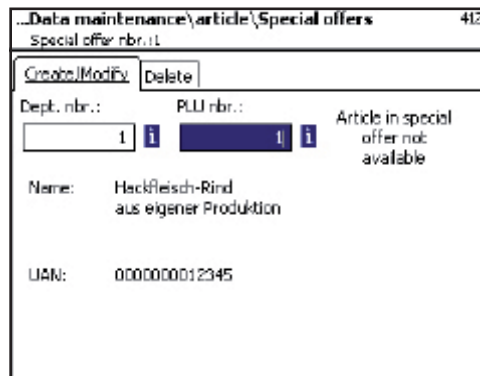

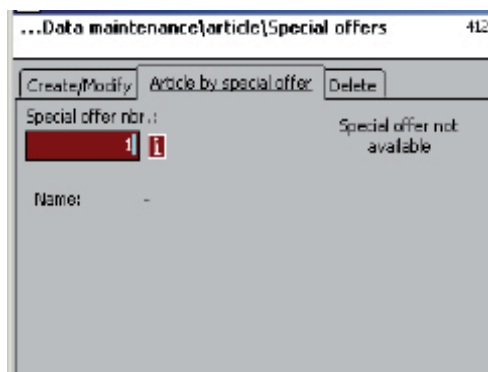


**Indication whether selected PLU is not contained in special offer:**



1 2 2

and/or ←

\*

- Enter PLU-Nbr.  PLU-Nbr. of new article.
- left arrow key  Department number of new article.
- Asterisk key  confirm

...article\Special offers\Create		412
Special offer nbr.: 1 Dept. nbr.: 1 PLU nbr.: 1		
1st price:	<input type="text" value="27.50"/>	1st price: 99.99
2nd price:	<input type="text" value="22.50"/>	2nd price: 25.00
Purchase price:	<input type="text" value="12.50"/>	Purchase price: 0.00




**Price 1:** Special offer price of sales price 1.

**Price 2:** Special offer price of sales price 2.

**Purchase price:** Modified purchase price of special offer article.

X X X

\*

- Prices  Enter prices
- Asterisk key  Entries are saved.
-  Enter PLU-Nbr. of next article.

**Delete special offer - quick start with 412;**

In this window you can delete a special offer.



**Entries tab "Delete":**


**Special offer Nbr.:** Enter number of special offer



- Asterisk key



confirm

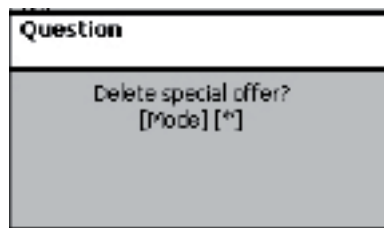

- Asterisk key



Confirm deletion; the complete special offer will be deleted.

or



 
- Mode key



Cancel operation.








Data maintenance/  
Configuration

**Ingredients (414)**


**create/modify, delete**

**Quick start with 414;**

In this window you can add ingredients to articles and create ingredients.

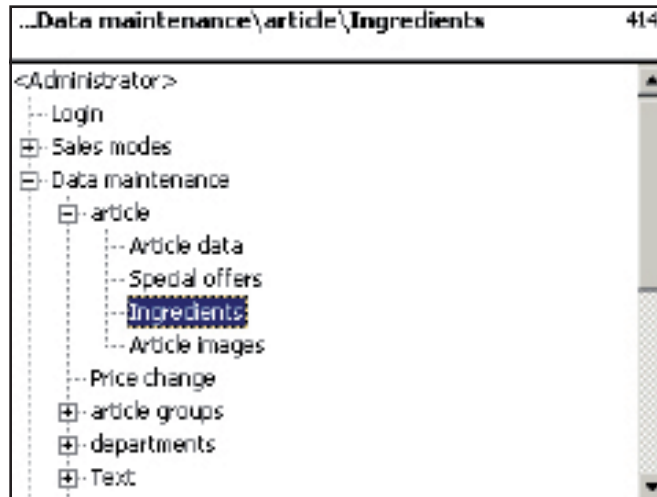

- Asterisk key  confirm

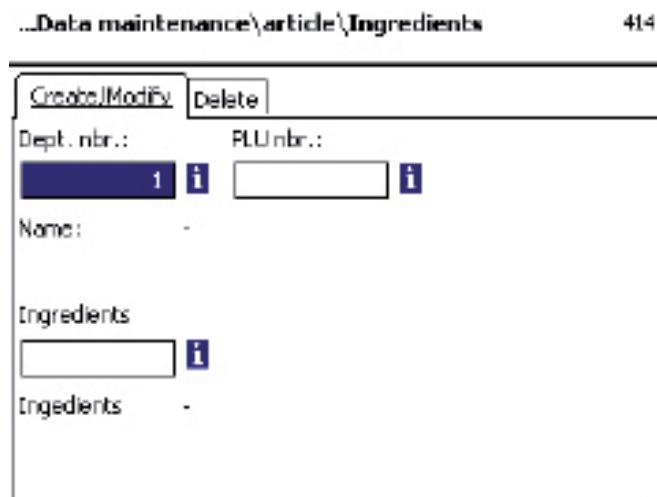

**Entris tab „Create/Modify“:**

**Dept. Nbr.:** Enter department Nbr. of PLU.


**PLU-Nbr.:** Enter PLU-Nbr.

**Ingredients Nbr.:** Enter number of ingredients.

**Ingredients Name:** Description of ingredients



- Asterisk key  confirm

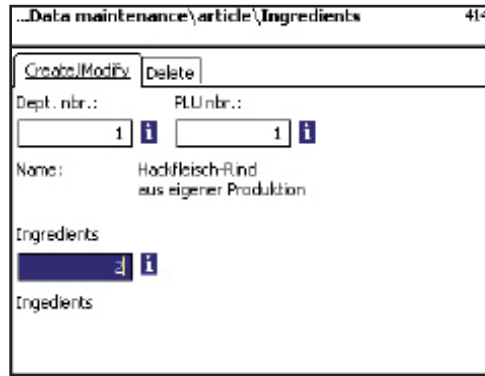

**Entries tab „Create/Modify“:**

**Dept. Nbr.:** Enter department number of PLU.

**PLU-Nbr.:** Enter PLU-Nbr.

**Ingredients Nbr.:** Enter number of ingredients. \*NEW\* in case of unknown ingredients.


**Ingredients name:** Description of ingredients



• Asterisk key



confirm

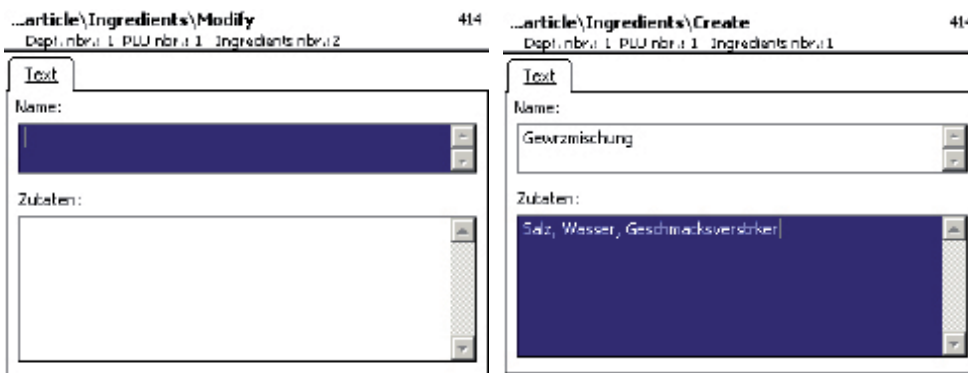

**Entries tab „Text“:**

**Name:** Description of these ingredients.

**Ingredients:** Enter ingredients.



• Asterisk key




confirm



Entries will be saved.



Assign or create next ingredients.

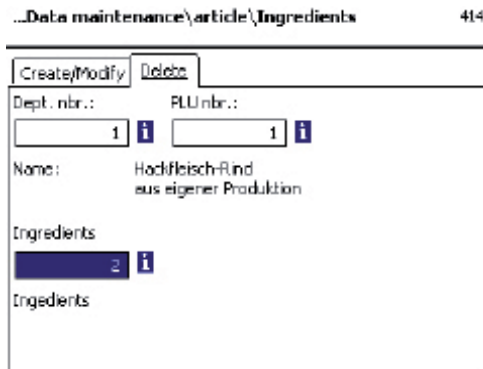

**Entries tab „Delete“:**

**Dept. Nbr.:** Enter department number of PLU.

**PLU-Nbr.:** Enter PLU-Nbr.

**Ingredients Nbr.:** Enter number of ingredients.

**Ingredients name:** Description of ingredients



- Asterisk key



confirm






Data maintenance/  
Configuration

**Price change (42)**

**Modify**

**Quick start with 42;**


You can carry out article price change here.

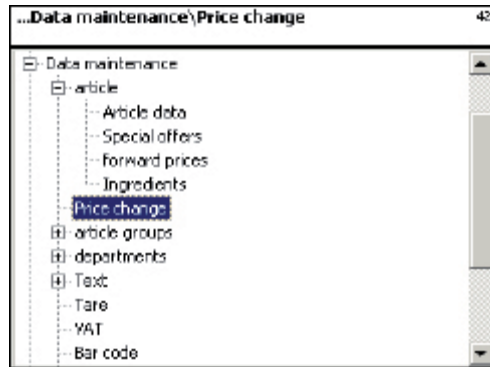

- Asterisk key



confirm

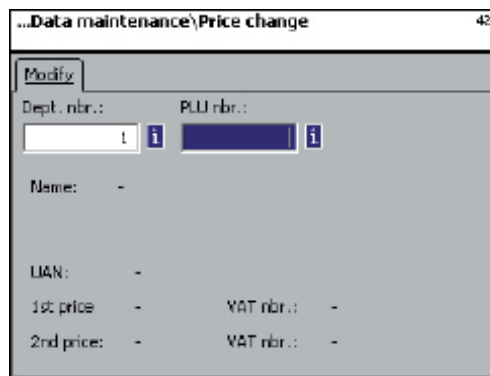

- Enter PLU-Nbr.



Enter PLU-Nbr. of the article of which you wish to modify the price.



- Left arrow key




Enter department number if PLU exists in another department.



- Asterisk key




Confirm entries.

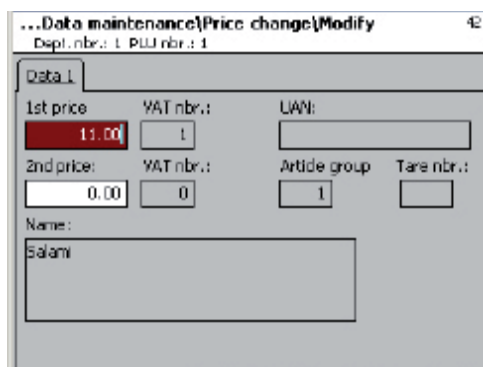

**Entries tab "Tab1":**


**Price 1:** Sales price 1.


 Enter new sales price 1 or 2.

**Price 2:** Sales price 2.



• Asterisk key

  confirm, enter number of next PLU of which you wish to modify the price.



Data maintenance/  
Configuration


### Main article groups (43)

#### create/modify, delete


#### Quick start with 43

In the departments, article groups can be grouped to main article groups. This allows a turnover related evaluation of several article groups.

You can create, modify or delete main article groups here.

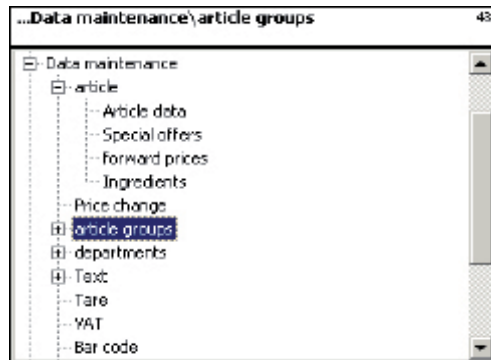


- Asterisk key  confirm

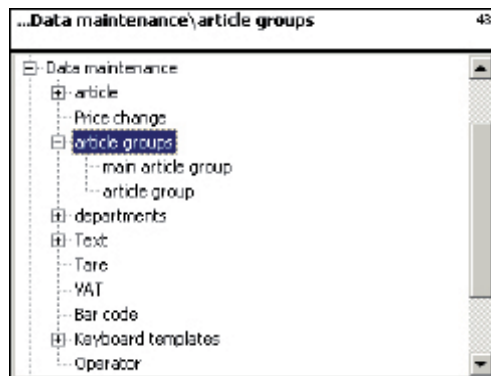


- Scroll down  Select main article groups.




- Asterisk key  confirm

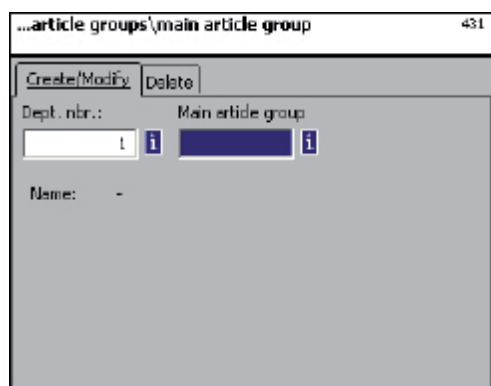

 Enter number of new main article group.



- Asterisk key  confirm

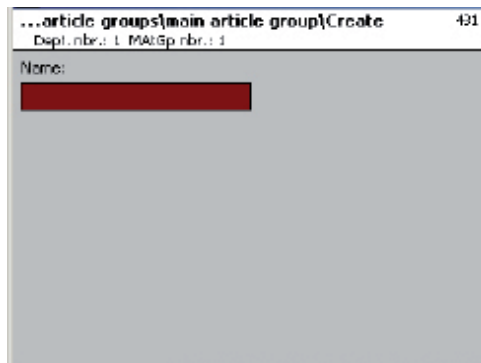

**Name:** Enter description of main article group.




• Asterisk key



confirm, enter number of next main article group.

**Delete main article group - Quick start with 431:**

In this window you can delete the main article group.

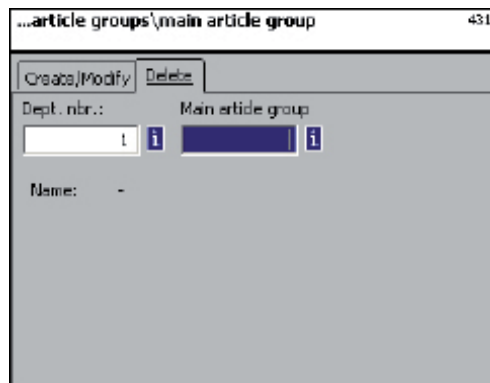

**Entries tab "Delete":**

**Dept. Nbr.:** Enter department Nbr. of main article group.


**MATGp Nbr.:** Enter main article group Nbr.



• Asterisk key



confirm

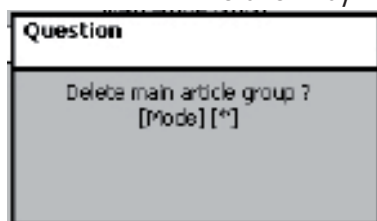


• Asterisk key



 Confirm deletion;






Data maintenance/  
Configuration

**Article groups (43)**  
**create/modify, delete**



**Quick start with 43**

All articles must be assigned to article groups. These article groups can then be grouped to main article groups.

This allows a turnover related evaluation of articles assigned to the same article group.  
You can create, modify or delete article groups here.

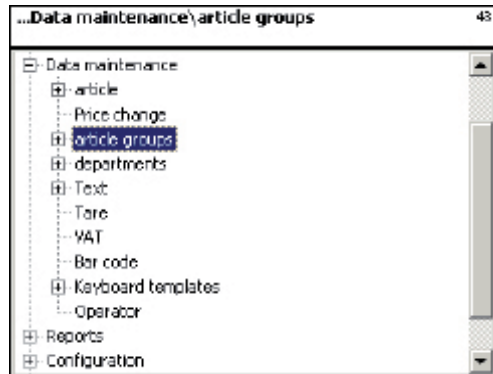

• Asterisk key confirm

 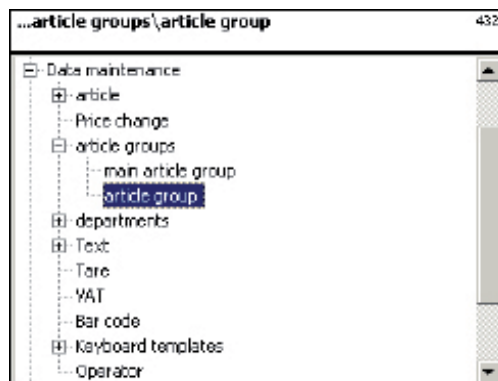


• 2 x Scroll down Select article group.

confirm




• Asterisk key

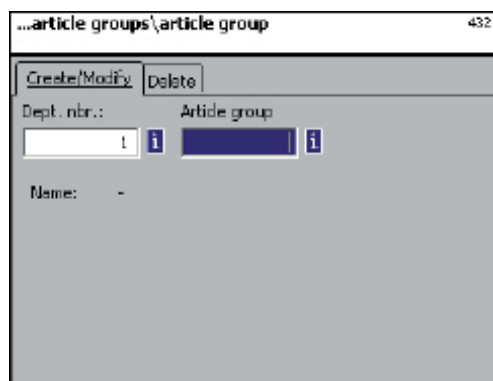

Enter number of new article group.



• Asterisk key confirm

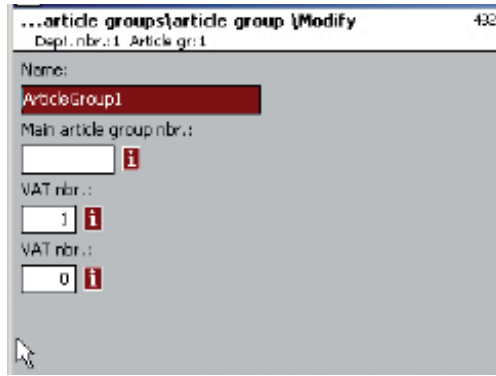

**Name:** Enter description of article group.

**MAAtGp Nbr.:** Number of main article group

**VAT Nbr.:** Value added tax number

**VAT Nbr.:** Value added tax number




• Asterisk key



confirm entries, enter number of next article group you wish to create.

**Delete article group - Quick start with 432:**

In this window you can delete the article group.

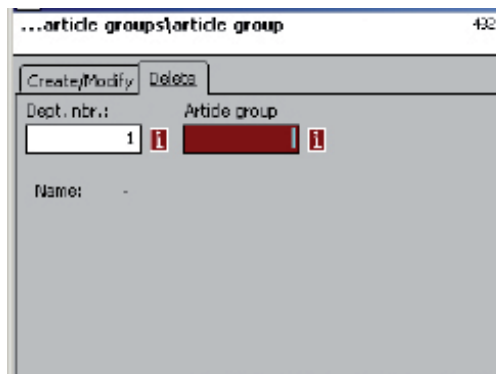

**Entries tab "Delete":**

**Dept. Nbr.:** Enter department Nbr. of article group.


**AtGp Nbr.:** Enter article group number.



• Asterisk key



confirm

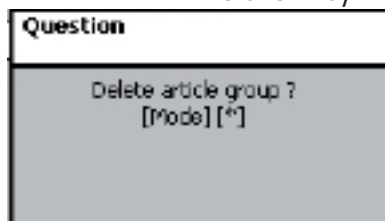

• Asterisk key



Confirm deletion;




Data maintenance/  
Configuration

**Main departments (441)**


**create/modify, delete**

**Quick start with 441;**

You can create main departments here to which departments can be assigned. This allows a turnover related summary of different departments for evaluation purposes. You can create, modify or delete main departments here.

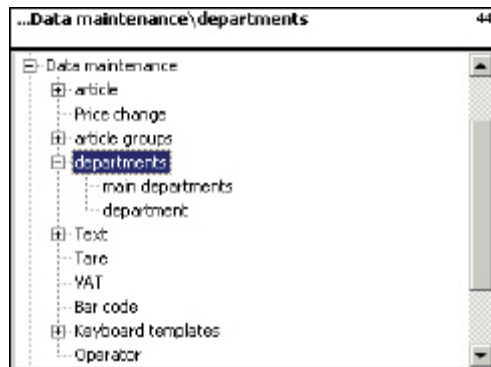


• Asterisk key  confirm

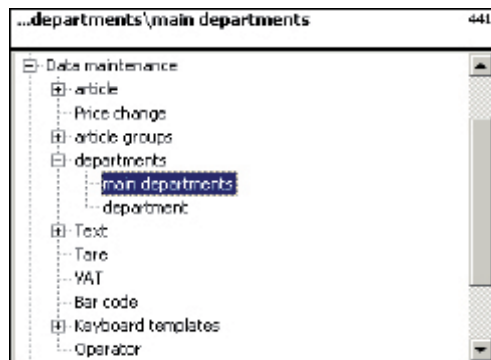


• Scroll down  Select main departments.




• Asterisk key  confirm

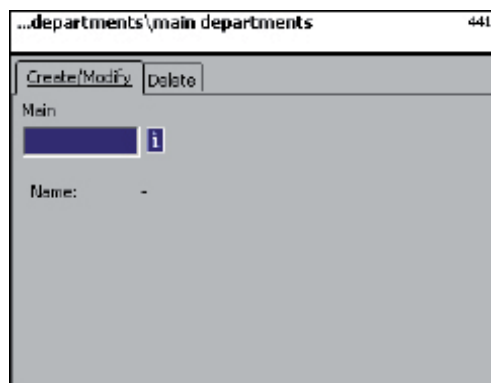

 Enter number of new main department.



• Asterisk key  confirm

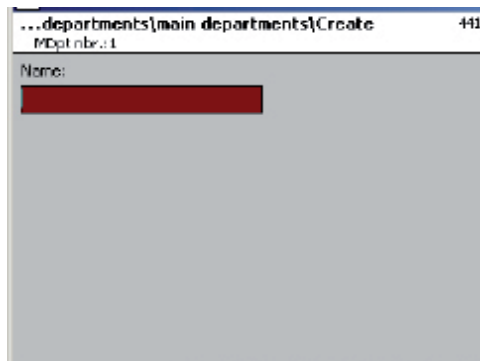

**Name:** Enter description of main department.




• Asterisk key



confirm, enter number of next main department.

**Delete main department - Quick start with 441:**

In this window you can delete the main department.

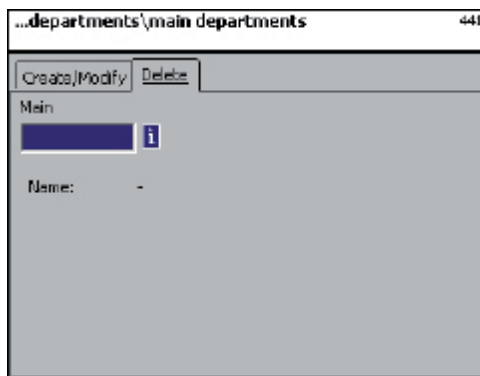

**Entries tab "Delete":**


**Dept. Nbr.:** Enter number of main department.



• Asterisk key



confirm

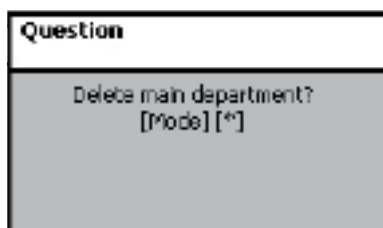

• Asterisk key



Confirm deletion.




Data maintenance/  
Configuration



**Department (442)**  
**create/modify, delete**

**Quick start with 442**

Every article has to be assigned to departments in order to be able to transmit them to the appropriate network scales/cash registers with the same department numbers. In addition, the department is responsible to define which EAN is printed on the total receipt. You can create, modify or delete departments here.

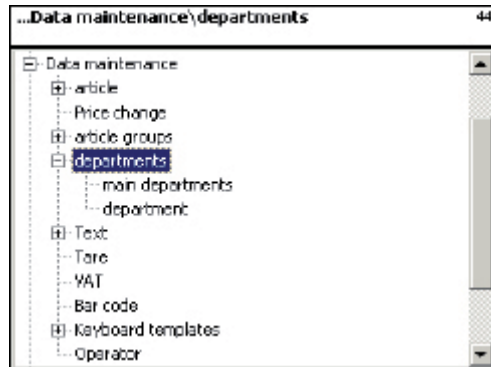


• Asterisk key confirm

 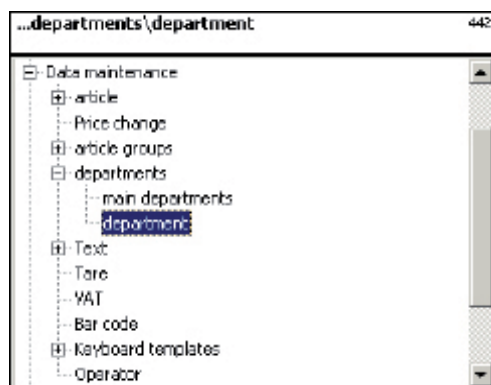

• 2 x Scroll down Select departments.




• Asterisk key confirm

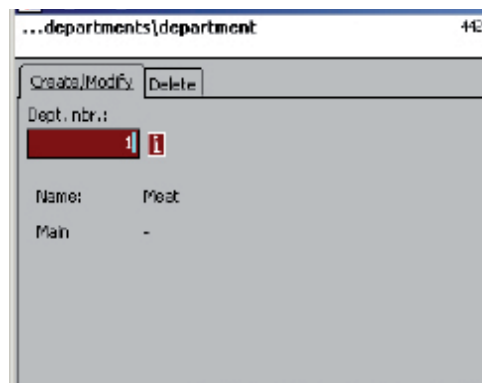

Enter number of new department.



• Asterisk key confirm

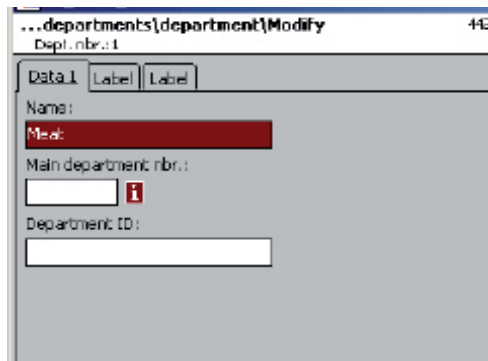

- Name:** Enter description of department
- MDept. Nbr.:** Number of main department
- Department ID:** Department ID for encryption in barcode.



• Asterisk key





Confirm entries, enter number of next department you wish to create.

**Entris tab „Label1 and Label2“:**


Details for department related label.

Information regarding the various items refer to **Create article, Menu item 411**.

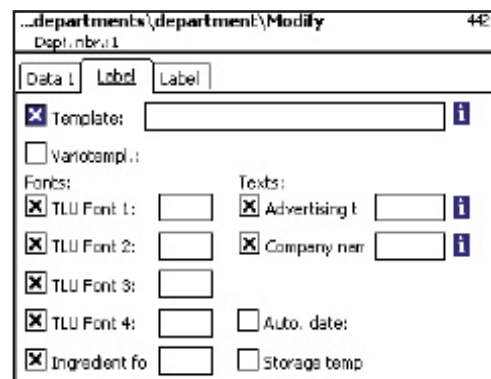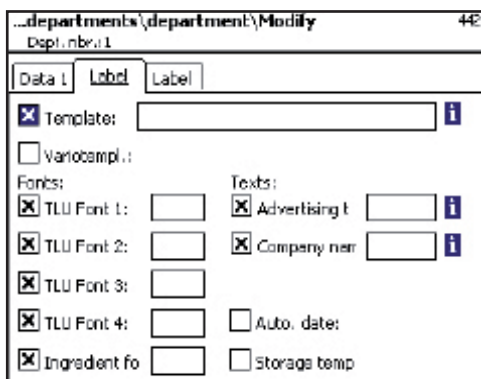

**Delete department - Quick start with 442:**

In this window you can delete the department.

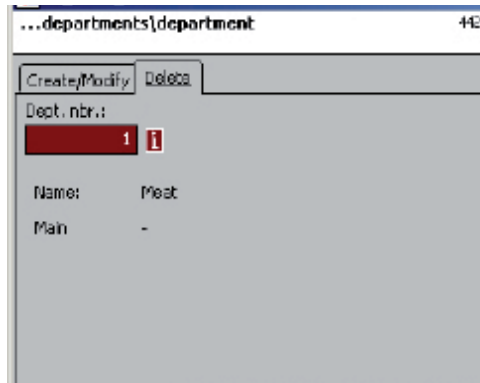

**Entries tab "Delete":**


**Dept. Nbr.:** Enter department number.



• Asterisk key




confirm

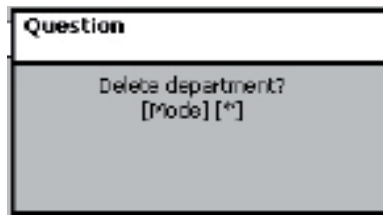

• Asterisk key



 Confirm deletion.




Data maintenance/  
Configuration

**Text - Advertising text (452)**  
**create/modify, delete**

**Quick start with 452;**

Advertising texts which are printed on the label, are created here.

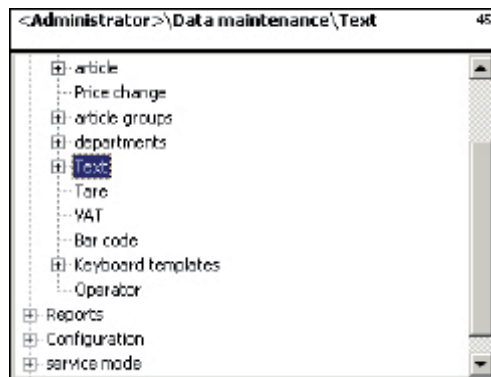


• Asterisk key confirm



• Scroll down Select advertising text.



• Asterisk key confirm

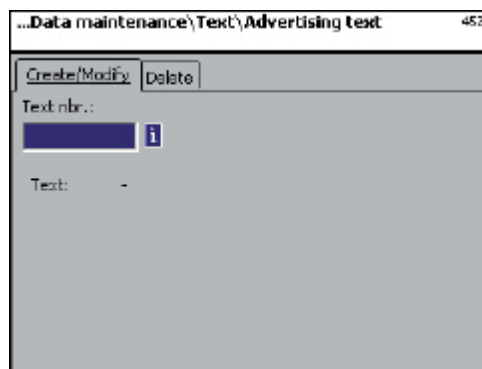


Enter number of new advertising text.



• Asterisk key confirm



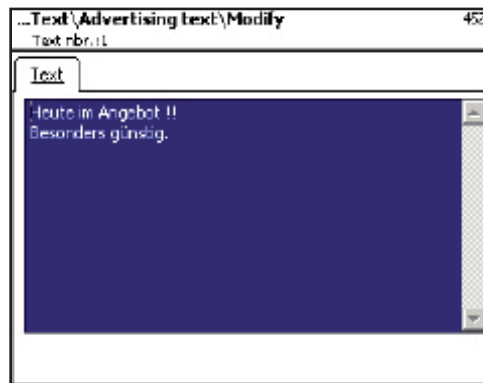

**Text:** Advertising text which is printed.




• Asterisk key



confirm, enter number of next advertising text.

**Delete advertising text - Quick start with 452:**

In this window you can delete the advertising text.

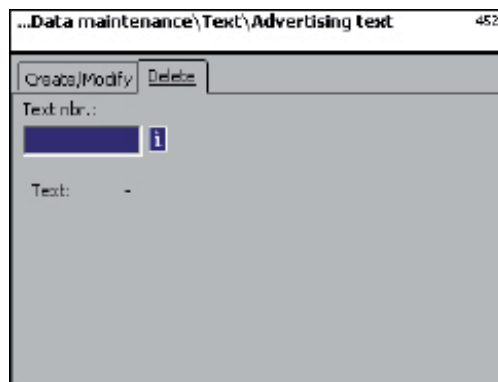

**Entries tab "Delete":**


**Text Nbr.:** Enter number of advertising text.



• Asterisk key



confirm

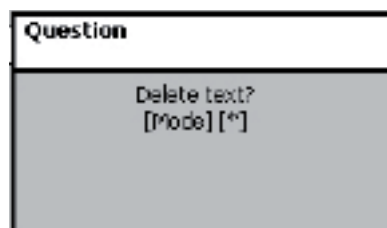

• Asterisk key



Confirm deletion.




Data maintenance/  
Configuration

**Text - Date texts (453)**

**create/modify, delete**

**Quick start with 453 ;**


Various date texts can be printed on the label in order to explain more detailed sell date, packing date or best before date.

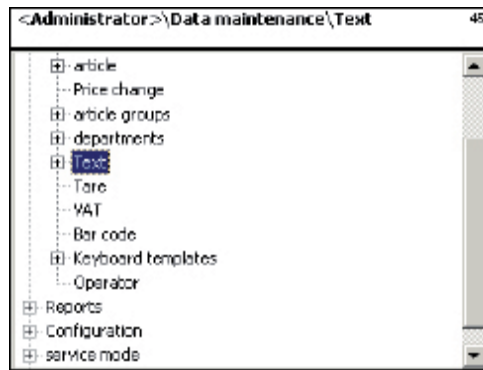

Asterisk key



confirm

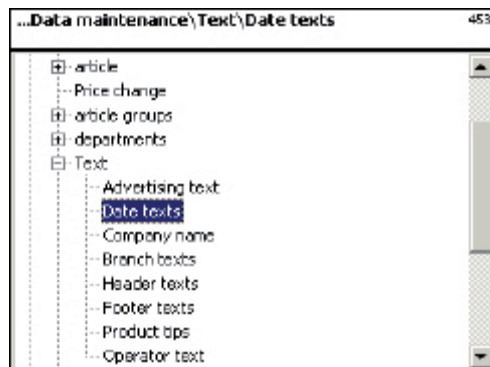

Scroll down




Select date texts.



Asterisk key



confirm

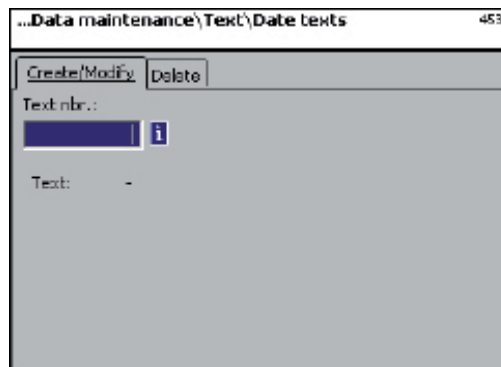


Enter number of new date text.



Asterisk key



confirm

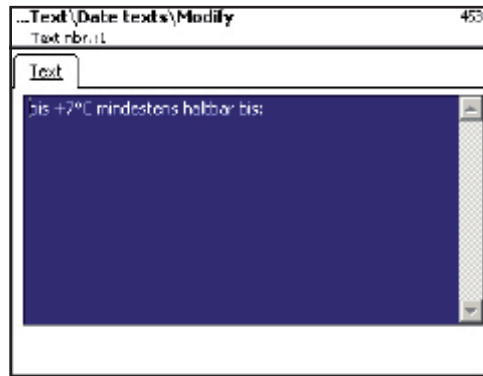

**Text:** Date text which is printed.




• Asterisk key



confirm, enter number of next date text.

**Delete date text - Quick start with 453:**

In this window you can delete the date text.

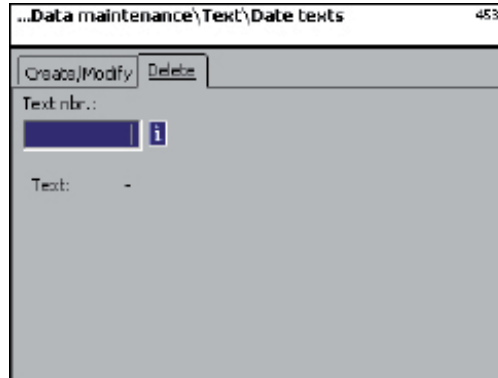

**Entries tab "Delete":**


**Text Nbr.:** Enter number of date text.



• Asterisk key




confirm

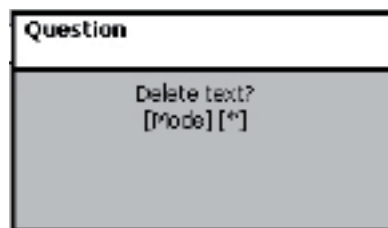

• Asterisk key



 Confirm deletion.




Data maintenance/  
Configuration

**Text - Company names (454)**

create/modify, delete

**Quick start with 454**


Various company names can be printed on the label.

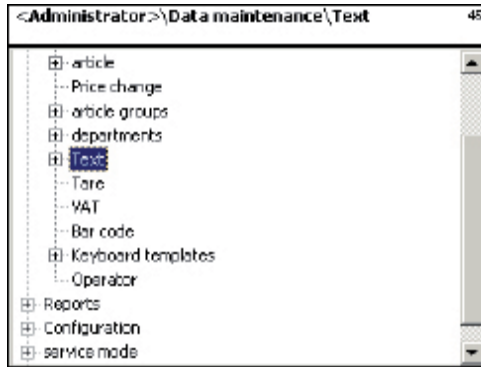

Asterisk key



confirm

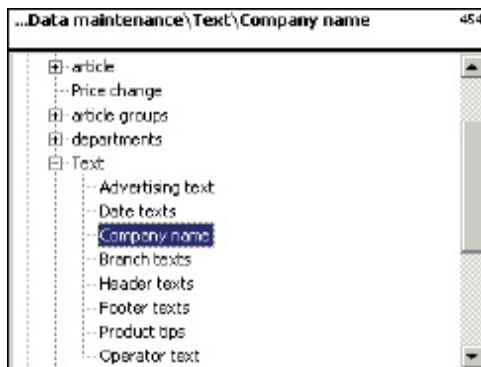

Scroll down




Select company name.



Asterisk key



confirm

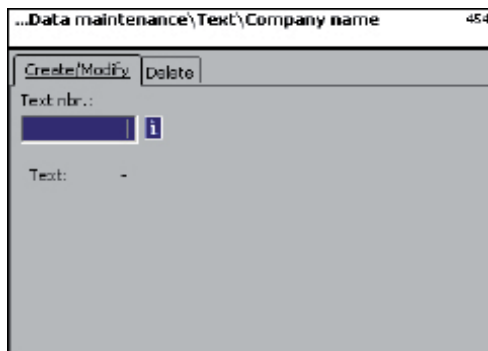


Enter number of new company name.



Asterisk key



confirm

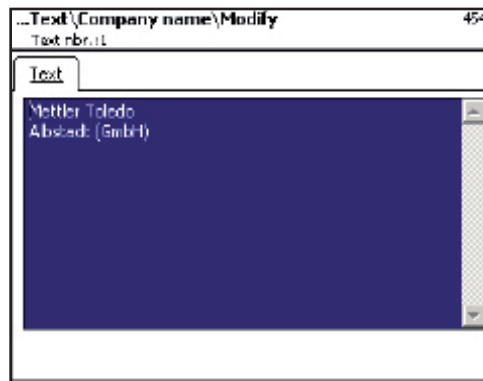

**Text:** Company name which is printed.




• Asterisk key



confirm, enter number of next company name.

**Delete company name - Quick start with 454:**

In this window you can delete the company name.

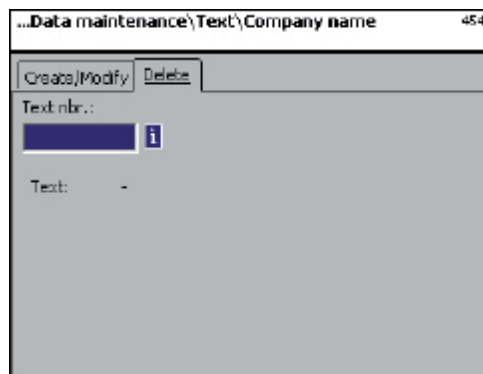

**Entries tab "Delete":**


**Text Nbr.:** Enter number of company name.



• Asterisk key




confirm

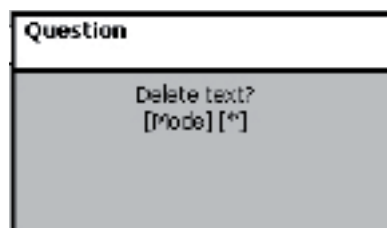

• Asterisk key



 Confirm deletion.




Data maintenance/  
Configuration

**Text - Branch texts (457)**


**create/modify, delete**

**Quick start with 457;**

A branch description can be created which will appear in addition to the receipt header text on each receipt of the devices. This branch text will also be printed on each turnover receipt.  
Prerequisite: The branch text has been selected in the printout configuration 852

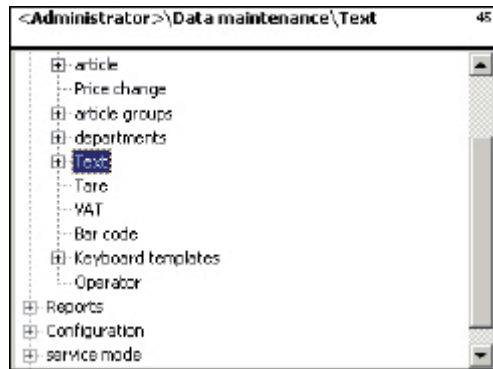


• Asterisk key confirm

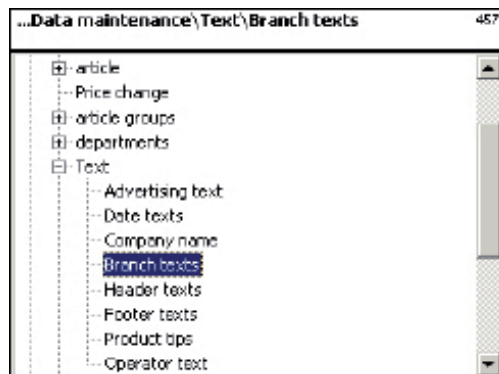

• Scroll down Select branch text.



• Asterisk key confirm

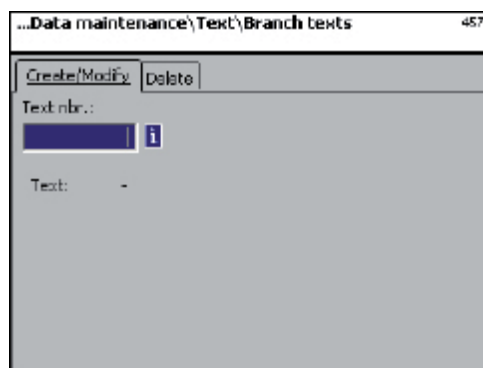

Enter number of new branch text.



• Asterisk key confirm



**Text:** Branch text which is printed.




• Asterisk key



confirm, enter number of next branch text.

**Delete branch text - Quick start with 457:**

In this window you can delete the branch texts.

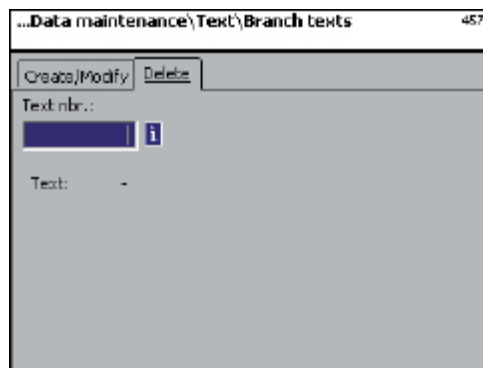

**Entries tab "Delete":**


**Text Nbr.:** Enter number of branch text



• Asterisk key




confirm

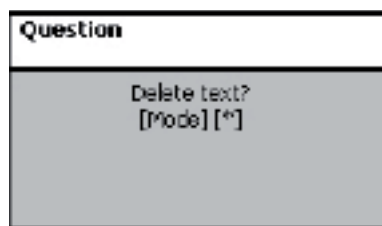

• Asterisk key



 Confirm deletion.



Data maintenance/  
Configuration


**Text - Header texts (458)**

**create/modify, delete**


**Quick start with 458**

The receipt header text appears first on top of the total receipt. For Self-Service scales (UC3-GT), this text is of no importance.

You can create, modify or delete receipt header texts here.

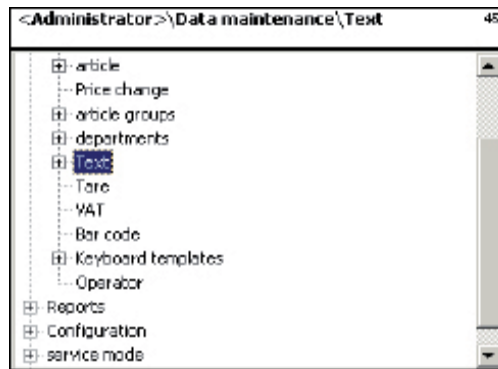


• Asterisk key confirm

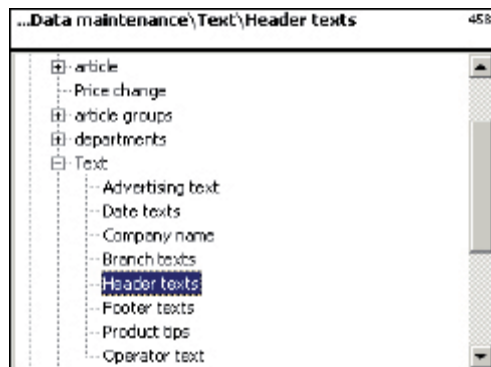

• Scroll down Select header texts.



• Asterisk key confirm

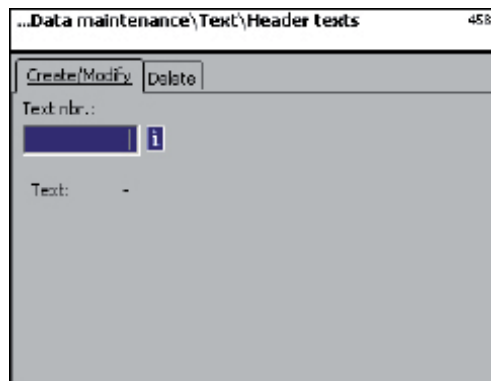


Enter number of new header text.



• Asterisk key confirm



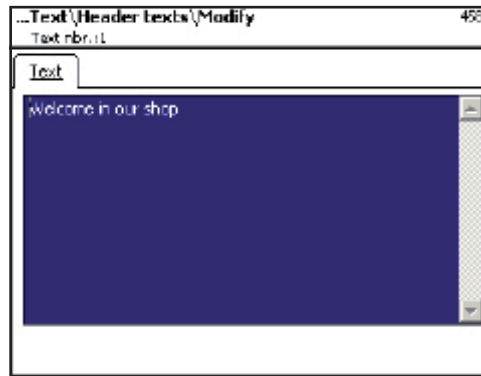

**Text:** Enter header text which is printed on the receipt.




• Asterisk key



confirm, enter number of next header text.

**Delete header text - Quick start with 458:**

In this window you can delete the header text.

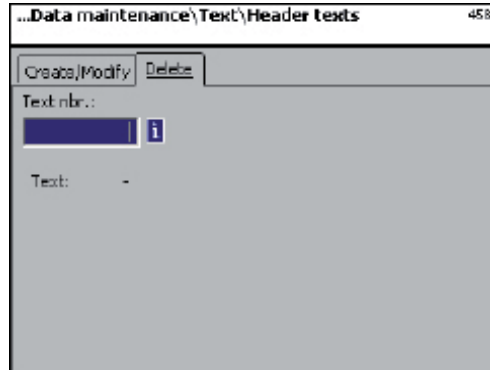

**Entries tab "Delete":**


**Text Nbr.:** Enter number of header text.



• Asterisk key




confirm

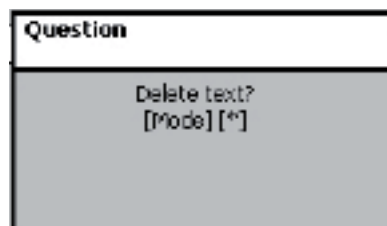

• Asterisk key



 Confirm deletion.




Data maintenance/  
Configuration

**Text - Footer text (459)**


**create/modify, delete**


**Quick start with 459;**

The receipt footer text appears last at the bottom of the total receipt. For Self-Service scales (UC3-GT), this text is of no importance  
You can create, modify or delete receipt footer texts here.

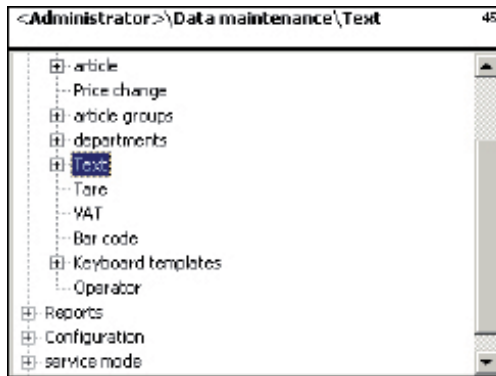


• Asterisk key  confirm

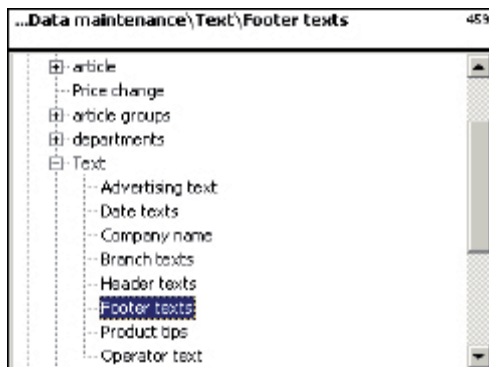


• Scroll down  Select footer texts.



• Asterisk key  confirm

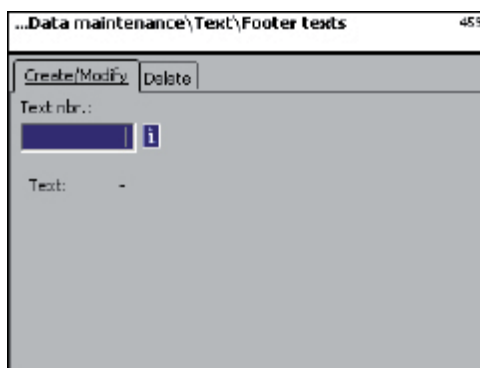

 Enter number of new footer text.



• Asterisk key  confirm



**Text:** Enter footer text which is printed on the receipt.




• Asterisk key



confirm, enter number of next footer text.

**Delete footer text - Quick start with 459:**

In this window you can delete the footer text.

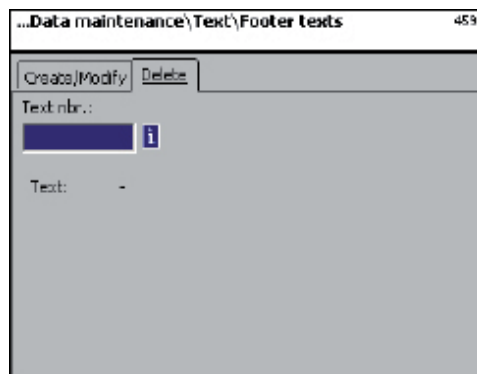

**Entries tab "Delete":**


**Text Nbr.:** Enter number of footer text.



• Asterisk key




confirm

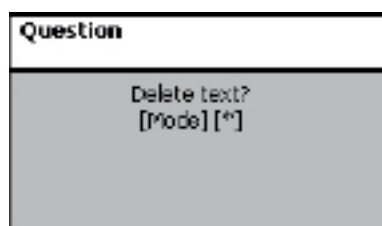

• Asterisk key



 Confirm deletion.



Data maintenance/  
Configuration


**Text - Product tip (45+1)**

**create/modify, delete**

**Quick start with 45+1**

Product tips are informations concerning single articles or groups of articles. They serve as additional information for the operator (display) and the customer (printout on receipt). The assignment of a product tip to an article is carried out in the article maintenance (511; Tab 2).

You can create, modify or delete product tips here.

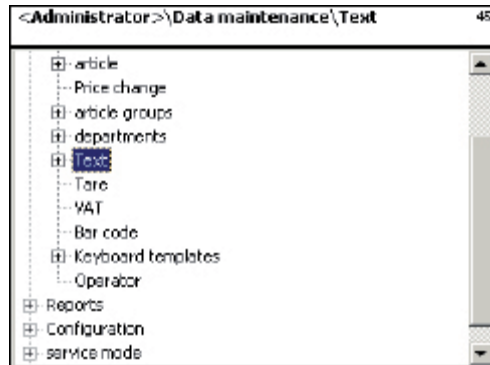


• Asterisk key confirm



• Scroll down Select product tip.




• Asterisk key confirm

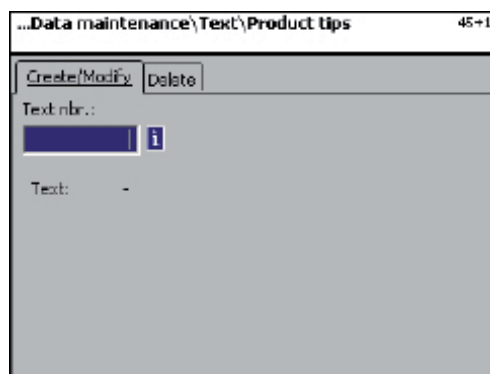

Enter number of new product tip.



• Asterisk key confirm

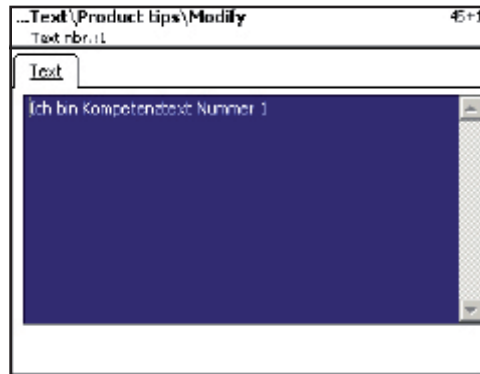

**Text:** Enter product tip which will be displayed or printed on the receipt.




• Asterisk key



confirm, enter number of next product tip.

**Delete product tips - Quick start with 45+1:**

In this window you can delete the product tip.

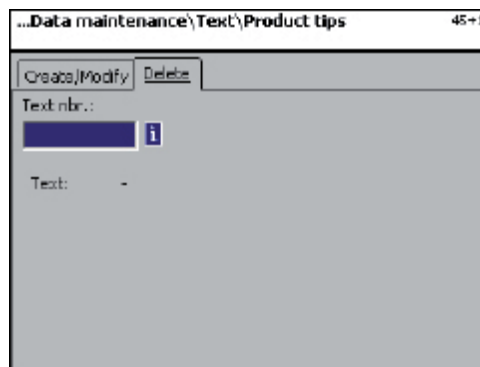

**Entries tab "Delete":**


**Text Nbr.:** Enter number of product tip.



• Asterisk key




confirm

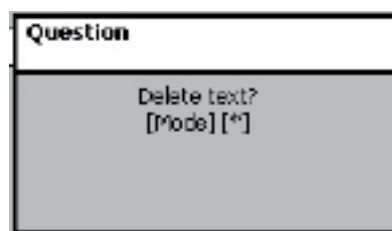

• Asterisk key



 Confirm deletion.



Data maintenance/  
Configuration

**Text - Operator text (45+2)**

**create/modify, delete**

**Quick start with 45+2**

A branch description can be created which will be printed on each receipt.

The branch text also appears in the turnover evaluation.

Prerequisite: The branch text has been activated in the Sale configuration of the devices **(651receipt1)**.

You can create, modify or delete branch texts here



Asterisk key



confirm



Scroll down




Select operator text.



Asterisk key



confirm

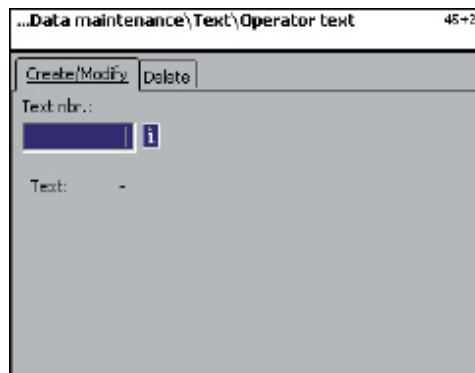


Enter number of new operator text.



Asterisk key



confirm

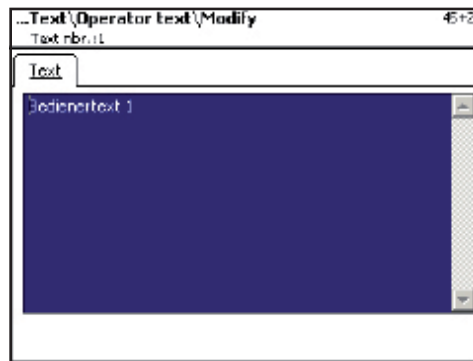

**Text:** Enter operator text which will be displayed or printed on the receipt.




• Asterisk key



confirm, enter number of next operator text.

**Delete operator text - Quick start with 45+2:**

In this window you can delete the operator text.

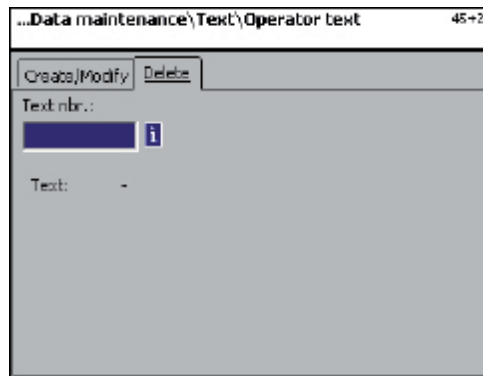

**Entries tab "Delete":**


**Text Nbr.:** Enter number of operator text.



• Asterisk key




confirm

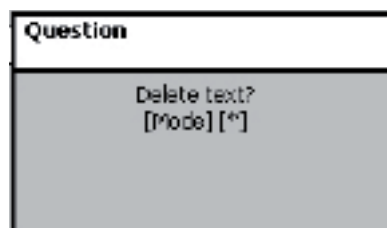

• Asterisk key



 Confirm deletion.



Data maintenance/  
Configuration

**Tare (47)**


**create/modify, delete**

**Quick start with 47;**

Tare values can be assigned to articles by weight. These tare values are saved with a tare number in a tare table. Later on, the tare weight value is assigned to the corresponding article via the tare number **(511)**.

**Consider graduation:** For the tare weight value the graduation of the connected scales has to be considered, for instance a scale with 2 gram steps. If the scale cannot show the entered tare weight value, the scale rounds up to the next appropriate weight value.


You can create, modify or delete tare values here.

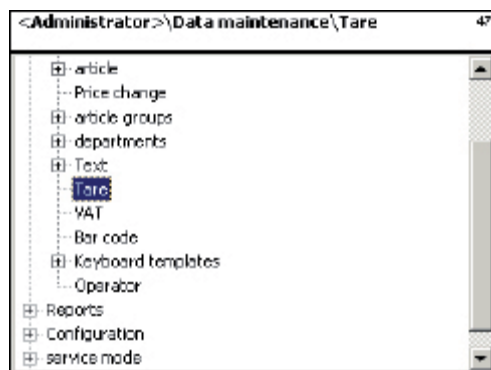

Asterisk key



confirm

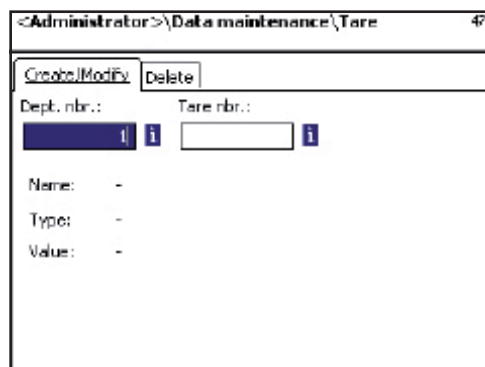

Enter tare Nbr.



Enter tare Nbr. of tare value.



left arrow key



Enter department number if tare is to be valid for another department.




Asterisk key



Confirm entries.



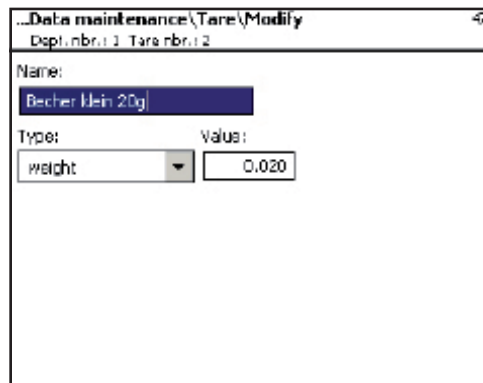

**Name:** Description of tare value e. g. "paper, heavy"

**Value:** Enter weight value in grams (consider graduation of scale)

**Type:** Indication of weight or percentage (of gross weight)




• Asterisk key



Confirm entries, enter number of next tare value.

**Delete tare - Quick start with 47:**

In this window you can delete the tare values.

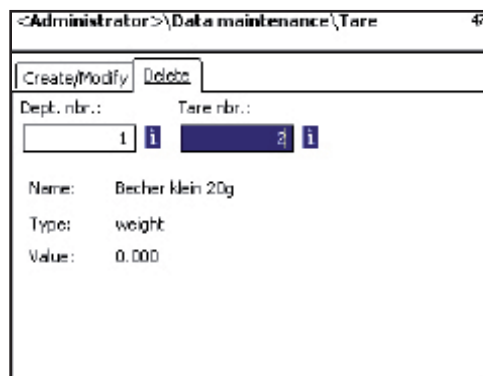

**Entries tab "Delete":**

**Dept. Nbr.:** Enter department number.


**Tare Nbr.:** Enter tare Nbr.



• Asterisk key




confirm

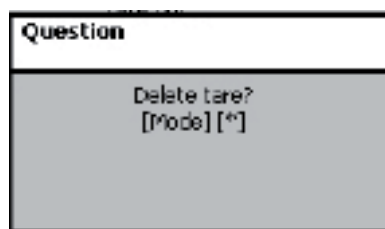

• Asterisk key



 Confirm deletion;



Data maintenance/  
Configuration


**VAT (48)**

**create/modify, delete**

**Quick start with 48;**

The various VAT-rates necessary can be created here. Their values may then be linked via the VAT-number to the articles in order to reveal the appropriate VAT-share while using the articles. **(511; Tab 2).**


You can create, modify or delete VAT-rates here.

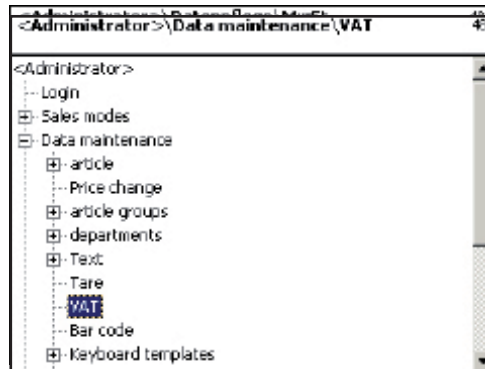

Asterisk key



confirm

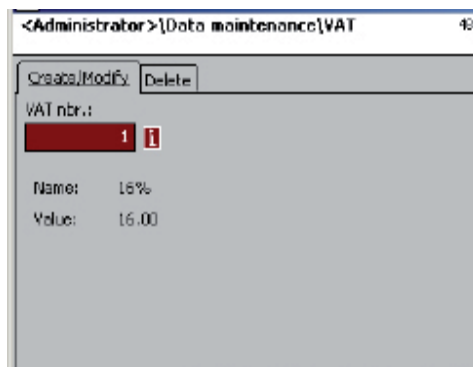

Enter VAT-Nbr.




Enter VAT-Nbr. of VAT-value.



Asterisk key



Confirm entries.

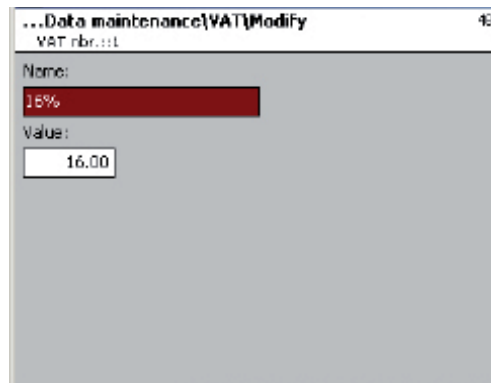

**Name:** Enter description of VAT-rate.

**Wert:** Enter percentage of VAT-rate.




• Asterisk key



Confirm entries, enter number of next VAT-rate.

**Delete VAT - Quick start with 48:**

In this window you can delete the VAT-rates.

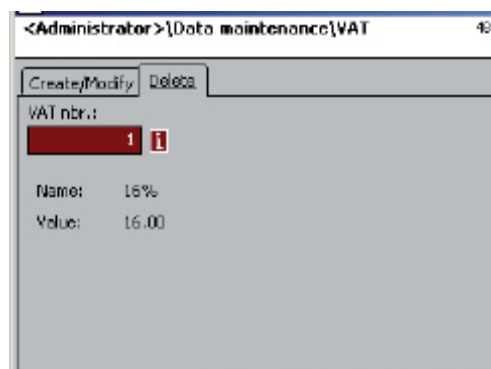

**Entries tab "Delete":**


**VAT Nbr.:** Enter VAT-number



• Asterisk key




confirm

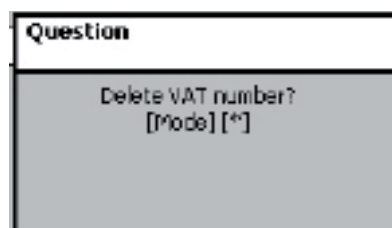

• Asterisk key



 Confirm deletion.




Data maintenance/  
Configuration

## Barcode(49)

### create/modify, delete

#### Quick start with 49;


This function is used to create a bar code list. The appearance of the bar code is defined here. Each code is saved with a number. With this number, the bar code can be assigned either to departments, devices or for instance to a label definition as well. The bar codes can be printed on the total receipts or on the labels for the precise scanning of articles. You can create, modify or delete the bar codes here.

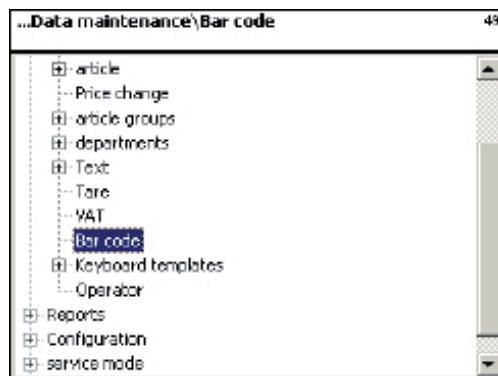

- Asterisk key



- confirm

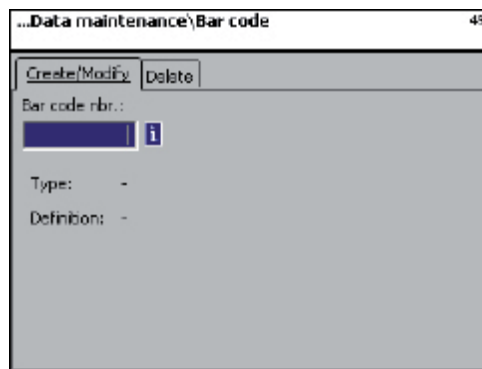

- Enter bar code Nbr.




- Enter number of bar code.



- Asterisk key



- Confirm entries.

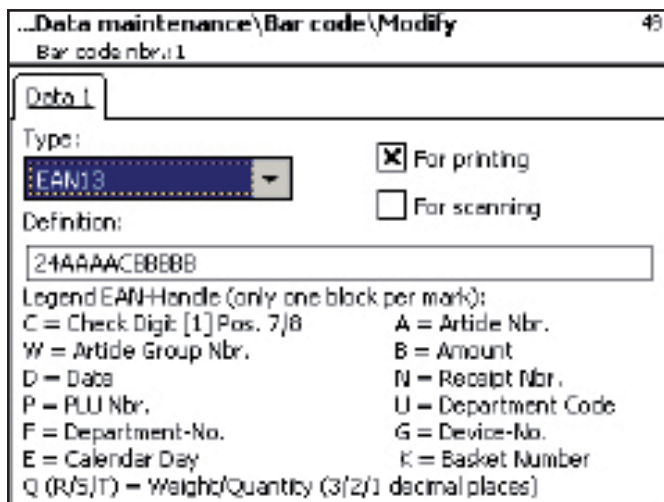

**Type:** Selection between EAN8 and EAN13



Identific.	Definition	Digits	Position EAN-13	Remark
<b>0...9</b>	Digits	12	1 - 12	
<b>A</b>	Article	12	1 - 12	when label printout
	Department	4	1 - 6	when strip printout
<b>B</b>	Amount	8	8 - 12	
<b>C</b>	Check sum	1	7+ 8, 13	obligation for last position
<b>D</b>	Date	6		not supported so far
<b>E</b>	Calendar day	3	1 12	
<b>N</b>	Receipt number	5	1 - 6	
<b>P</b>	PLU	6	1 - 6	
<b>Q</b>	Quantity		8 - 12	Piece PLU
	Weight cell	5	8 - 12	Weight PLU
<b>R</b>	Weight with 3 decimal digits	5	8 - 12	Weight PLU
<b>S</b>	Weight with 2 decimal digits	5	8 - 12	Weight PLU
<b>T</b>	Weight with 1 decimal digit	5	8 - 12	Weight PLU
<b>W</b>	Article group	4	1 - 6	
<b>U</b>	Department ID	12	1 - 12	

**Remarks:**

Each identification is only permissible as a coherent block. This block may only exist once.

Exception: Digits may be placed everywhere, as well as several blocks.

EAN-13: Check sum has to be at position 13, additionally also possible at position 7 or 8.

EAN-8: Check sum has to be at position 8 (and only there)

PLU is our internal PLU Number, article is SAN (Standard Article Number, partially worldwide unique)

Amount and weight are always printed without a comma, the amount with decimal digits, and the weight in grams.

Q is printed in the same format as delivered by the cell. R,S,T are re-formatet to fix decimal digits.

Identification T may have variable meanings.




• Asterisk key



confirm entries, enter number of next bar code you

**Delete bar code - Quick start with 49:**

In this window you can delete the bar code.

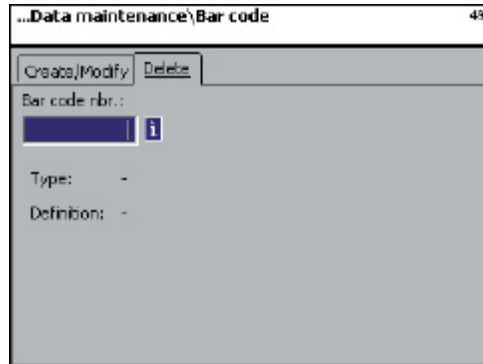

**Entries tab "Delete":**

 
**Bar code Nbr.:** Enter bar code number.



- Asterisk key  confirm



- Asterisk key  Confirm deletion;





Data maintenance/  
Configuration

**Keyboard templates (- Standard) (4 + 11)**

**create/modify, delete**

**Quick start with 4 + 11;**

In this window you can create the various keyboard layouts for the individual departments. You can create, modify or delete the keyboard layouts here.

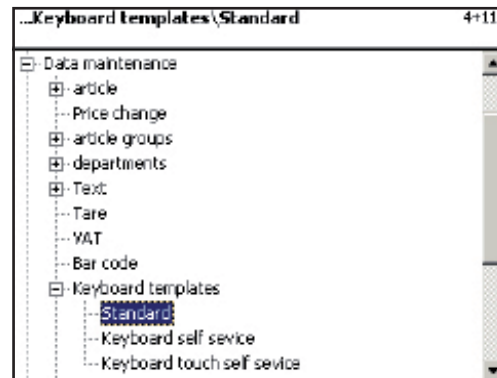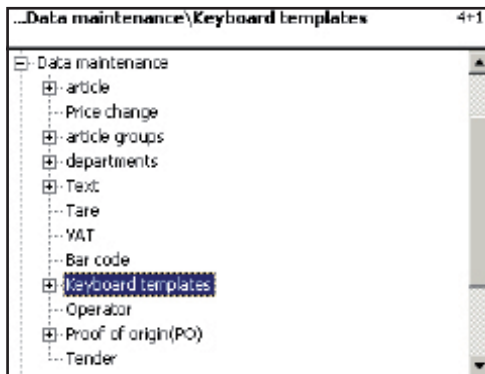

• Scroll down



Select Standard.



• Press the Star key

To confirm



• Enter keyboard number



Enter the number of the keyboard layout.



• Enter keyboard type


Enter the keyboard type.

 


• Press the Star key



To confirm your entries.

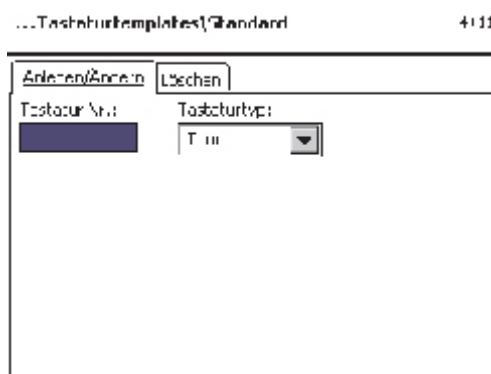




Data maintenance/  
Configuration

### Data maintenance Operator (4 + 2)

#### create/modify, delete

#### Quick start with 4 + 2;


In this window you can create, modify and delete operators.

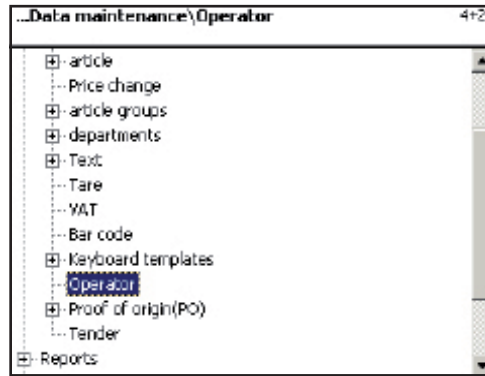

• Asterisk key



confirm

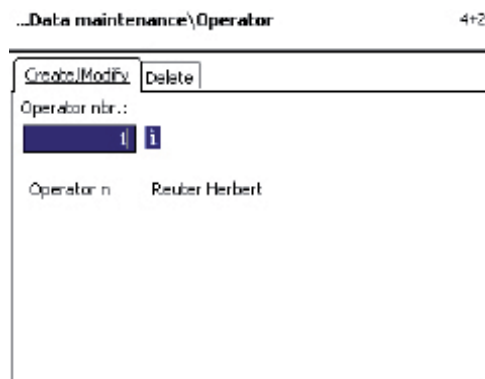

• Enter Operator Nbr.




Enter number of operator.



• Asterisk key



Confirm entries.

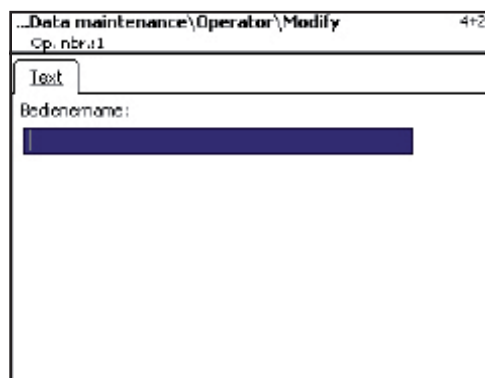

#### Operator name:

Enter name



• Asterisk key



Confirm entries, enter number of next operator.



**Operator- Quick start with 4 + 2:**

In this window you can delete an operator.




**Entries tab „Delete“:**



**Operator Nbr.:** Enter operator number.



- Asterisk key  confirm

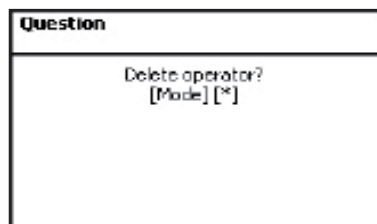

- Asterisk key  Confirm entries.

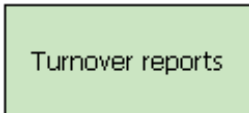 


**Turnovers (Z Reports) (5)**

**printing**

**Quick start with 5;**

In this window you can view sales (Z reports)

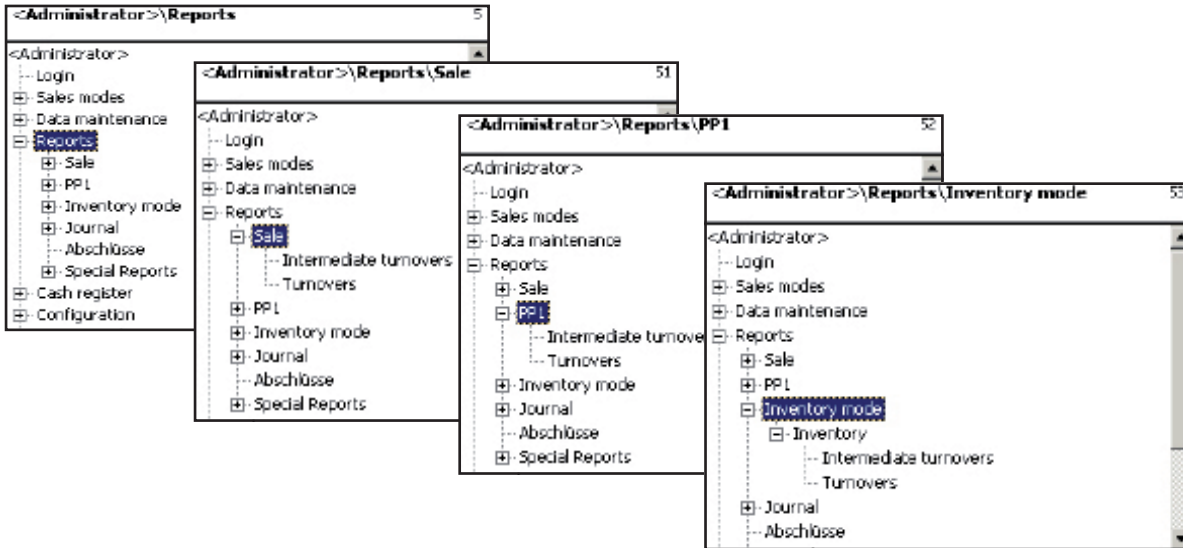

**Quick start with 512 "Sale - Turnovers"**

**Quick start with 522 "PP1 - Turnovers"**

**Quick start with 532 "Inventory - Turnovers"**

The sales for Selling mode are described on the following pages.



• Scroll down




Select Turnovers.



• Press the Star key



To confirm.

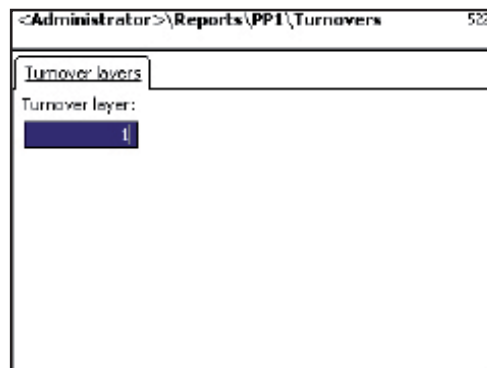

Enter turnover layer (sales level).



Confirm.

**Turnovers- quick start with 5**

In this window you can view various sales reports (Z reports).

**Turnover reports:**

**"Vx/Scale report"; "Department report"; "Article report"; "Article group report"; "Main article group report"; "Main department report"; "Special offer report"; "Time related";**

**On the "Vx/Scale Report" tab:**



- Code key



Select report.




- Star key



Report is printed.




- Mode key

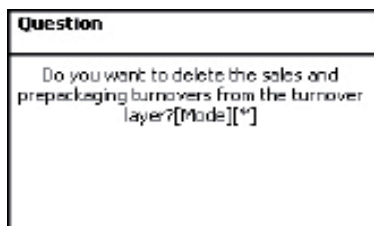

- Star key



Delete turnover layer (sales level)

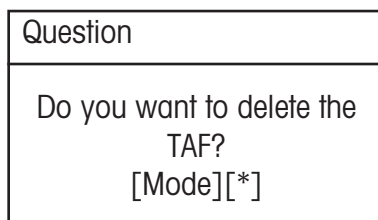

- Star key



Delete TAF

## Modules requiring activation

---



The activation is carried out by METTLER TOLEDO.

### 1. Receipt forwarding

Balanced customer receipts are made available for the cash register and for customer specific sales evaluations.

### 2. Proof of origin

For the labelling of beef, mincemeat, fish, etc. to facilitate the traceability of origin.

### 3. Cash register functions

Cash register transactions carried out directly on the scale  
(scale + cash drawer + option cash register function)

### 4. EC-Cash

This application enables payment to take place via a card reader terminal. Payment can take place via credit- / EC- / debit card. The available methods of payment are defined by the card reader terminal deployed, the chosen distributor as well as the contracts finalised with the dealer.

## **Information about the proof of origin**

### **Revision of beef labelling regulation**

From september 1st, 2000, the compulsory beef labelling came into force in all countries of the European Union. According to the regulation (EG) Nbr. 1760/2000, which replaces the regulation (EG) Nbr. 820/97 information about the location of birth, fattening and slaughtering of the animal or group of animals from which the meat was derived must be shown on the label in addition to the reference number of the beef, which serves for the traceability of the meat. Furthermore, the place of cutting of the meat as well as the approval number of their slaughtering and cutting plant resp. cutting plants has to be indicated. This information is described as „compulsory information“.

### **Compulsory information for beef labelling (beef from the EU)**

#### **Reference number/code:**

The number guarantees the traceability of the meat. This number may be the identification number of the animal from which the meat was derived or the identification number of a group of animals (lot). In no case, the size of the lot may exceed the daily production of a plant and the lot has to be slaughterhouse clean which means only animals from one slaughterhouse may be grouped in a lot.

#### **Born in:**

Identification of EU member state or third country. The use of country codes is not permitted!

#### **Fattened in:**

Identification of EU member state or third country. The use of country codes is not permitted!

#### **Slaughtered in:**

Identification of EU member state or third country. The use of country codes is not permitted!

#### **European slaughterhouse number (ES-Nr.):**

In case the slaughterhouse has no european approval number, the national registration number has to be mentioned. Is this number not available either, name and address of the slaughtering plant have to be mentioned. The lots have to be slaughterhouse clean, which means only the number or address of one slaughtering plant may be mentioned.

#### **Cut in:**

Identification of EU member state or third country in which the animal has been cut. The use of country codes is not permitted!

#### **European cutting plant number (EZ-Nr.):**

In case the cutting plant has no european approval number, the national registration number has to be mentioned. Is this number not available either, name and address of the cutting plant have to be mentioned. Opposed to the slaughtering level, the indication of multiple numbers is possible as far as the beef is traceable to the delivery of a single slaughterhouse.

## Legend Date format

---

Date resp. time format to be printed is mentioned as a character chain.

Character	Description	Printout
y	Year	Number
M	Month of the year	Number (1-12)
d	Day of the month	Number (1-31)
h	Hour in AM/PM	Number (0-11)
H	Hour of the day	Number (0-23)
m	Minute of the hour	Number (0-59)
s	Second of the minute	Number (0-59)
E	Day of the week	Number (1-7)
D	Day of the year	Number (1-365)
a	AM/PM	Text (am or pm)
'	Text limiter	Quotation marks
"	Inverted comma	Apostrophe

### Examples:

Character	Printout
yyyy.MM.dd 'at' HH:mm:ss	1996.07.10 at15:08:56
yy.M.d	96.1.12
h:mm a	10:08 PM
HH 'o'clock'	15 o'clock



When entering the date formats, only the predefined characters may be used. To separate single characters, the . (dot) is used.

# Font types 2" Printer




# Font types 3" Printer Part 1

The image displays a grid of 88 rows of printer font samples. Each row contains the sequence '1234567890123456789012345678901' printed in a specific font style, size, and weight. The rows are numbered 00 through 87. The font styles vary significantly, including standard sans-serif, bold, italicized, and various sizes, demonstrating the printer's capabilities. The sequence '12345678901' is repeated for each row, allowing for a comparison of how the characters look at different scales and in different styles.



## Font types 3" Printer Part 2

---

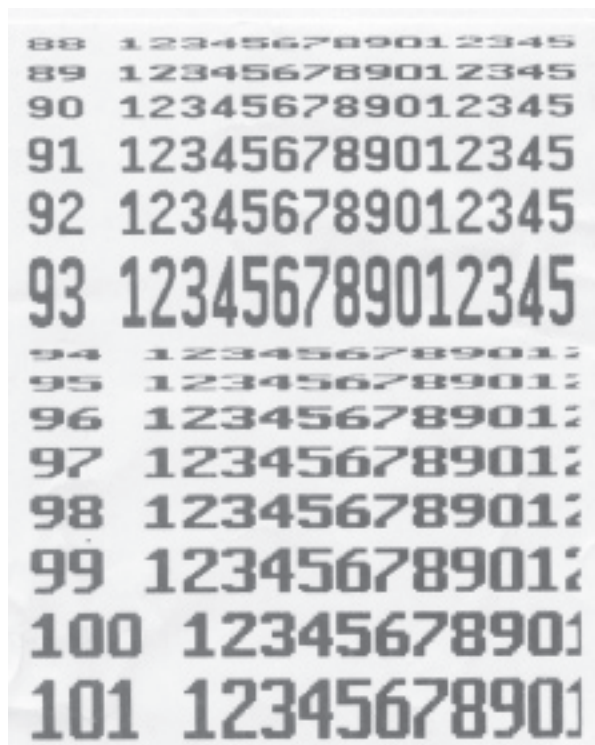

# Code numbers


## Fixed Code Numbers

1	<code 1>	Data maintenance	<b>NonSalesMode Data maintenance</b>
8	<code 8>	Price change	<b>NonSalesMode Data maintenance</b>
22	<code 22>	Intermediate turnover	<b>NonSalesMode Reports</b>
333	<code 333>	Turnover	<b>NonSalesMode Reports</b>
4444	<code 4444>	Configuration	<b>NonSalesMode Configuration</b>


**Start:**



- Mode key In the weighing mode

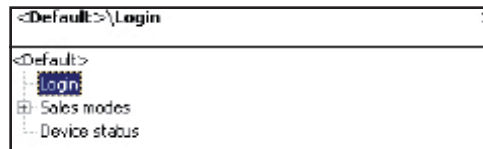


**Login:** .....

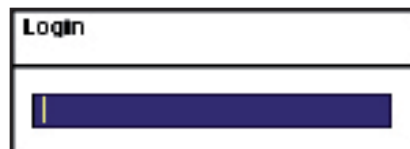

- Asterisk key Confirm entries.


### Code number 1 (Data maintenance)

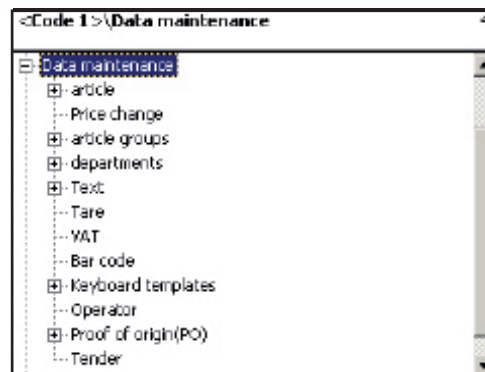

### Code number 8 (Price change)




## Code number 22 (Intermediate turnovers)

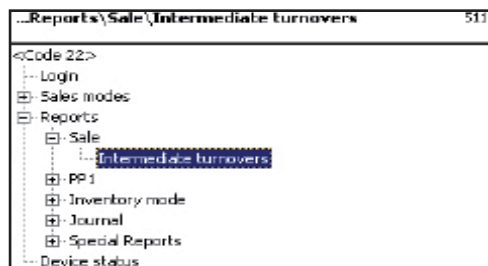

## Code number 333 (Turnovers)



## Code number 4444 (Configuration)

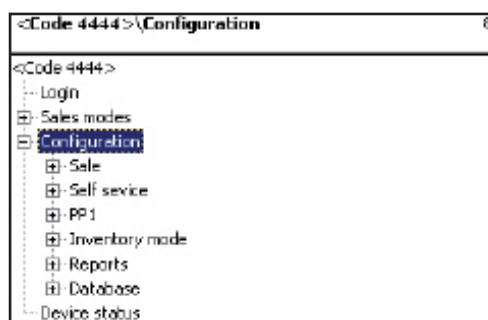

# Your personnel code numbers

	Old number	New number	Code function	Description
e. g.	1	123		

## Menu tree

---

SW 1.13	Data maintenance	1
	Price change	8
	Intermediate turnovers	22
	Turnovers	333
	Configuration	4444

### 2 Sales modes

21 Sale	
22 Self-Service	
23 PP1	
24 Invenotry mode	241 Inventory
29 Operating System	

<b>4 Data Maintenance</b>	41 Article	411 Article data
Login = 1		412 Special offers
		414 Ingredients

Login = 8	42 Price change	
	43 Article groups	431 Main article group 432 Article group
	44 Departments	441 Main departments 442 Department
	45 Text	452 Advertising text 453 Date texts 454 Company name 457 Branch text 458 Header 459 Footer 45+1 Product tips 45+2 Operator text

	47 Tare		
	48 VAT		
	49 Bar code		
	4+1 Keyboard templates	4+11 Standard	
		4+12 Keyboard Self-Service	
		4+13 Keyboard Touch Self-Service	
	4+2 Operator		
	4+3 Proof of origin	4+31 PO masks	
		4+32 PO lots	
		4+33 PO article assignment	
<b>5 Reports</b>	51 Sale	511 Intermediate turnovers	Login = 22
		512 Turnovers	Login = 333
	52 PP1	521 Intermediate turnovers	
		522 Turnovers	
	53 Inventory	531 Intermediate turnovers	
		532 Turnovers	

## 89 Reports

## 8+1 Database

8+11 Clean directories

8+13 Configuration data 8+131 Distribute

**9 Service mode**

## 91 Initialisation

911 Network Reset  
 912 Primary configuration  
 913 Default configuration  
 914 Date/Time  
 915 Language

## 92 Scale network functions

921 Scale network configuration  
 922 Scale network status  
 923 Delete device from scale network  
  
 924 Delete non active devices  
  
 925 Receipt forwarding

## 93 Hardware

931 Printer  
 932 Load cell  
  
 9321 Service mode  
 9322 High resolution  
 9323 Filter  
 9324 Identblock

**+1 Device status**



## Index

### A

Accompanying receipt 23, 137  
 Article group report IT 126, 127  
 Article groups (43) 85  
 Article report IT 126

### B

Barcode (49) 112

### C

Change from Self-Serv. mode (operat. keyboard) 42  
 Code functions 59  
 Code number 1 (data maintenance) 160  
 Code number 22 (intermediate turnovers) 161  
 Code number 24681357 (full access) 160  
 Code number 333 (turnovers) 161  
 Code number 4444 (configuration) 161  
 Code number 8 (price change) 160  
 Code numbers 159  
 Configuration-Inventory-Operation (8412) 151  
 Configuration-Inventory-Printout (84111) 150  
 Configuration-PP1- Keyboard (833) 149  
 Configuration-PP1- Operation (832) 147  
 Configuration-PP1- Printout (8312) 145  
 Configuration-Sale-Keyboard(813) 139  
 Configuration-Sale-Operator Service (812) 136  
 Configuration-Sale-Printout - Label (811) 134  
 Configuration-Sale-Printout-Receipt (8111) 132, 154  
 Configuration-Self-Service-Keyboard (823) 143  
 Configuration-Self-Service-Layout (824) 144  
 Configuration-Self-Service-Operation (822) 142  
 Configuration-Self-Service-Printout-Label (821) 140  
 Contrast of Display 23  
 Customer receipts creation 32  
 Customer receipt reopening 34  
 Customer receipt repetition 33  
 Customer total with change calculation 32

### D

Data and time setting 25  
 Data key 116  
 Date key 50  
 Data maintenance operator (4 + 2) 122  
 Department (442) 89  
 Department report IT 125, 127, 128

### F

Fixed Code numbers 159  
 Functions in Self-Serv. mode (25 keys overlay) 46  
 Functions in Self-Serv. mode (50 keys overlay) 45  
 Functions in Self-Serv. mode (100 keys overlay) 43, 44  
 Functions in Self-Serv. mode (180 keys overlay) 43

### H

Header 133

### I

Icon's on the display 21  
 Info about next possible key 22  
 Ingredients (414) 78  
 Intermediate turnovers (51) 124  
 Intermediate turnovers - Quick start with 51 125  
 INVENTORY 51  
 Inventory key 116  
 Inventory, temporary 52

### K

Keyboard templates (- Standard) (4 + 1) 115  
 Keyboard types 115

### L

Label key 116  
 Legend date format 155

### M

Main article group report II 127  
 Main article groups (43) 83  
 Main department report IT 127, 128  
 Main departments (441) 87  
 Menu tree 162  
 Mode key 54

## Index

---

### N

Navigation in the menus 58  
NonSalesMode (- Configuration) 132  
NonSalesMode (- Data maintenance) 60  
NonSalesMode (- Reports) 124

### O

Operator login and logoff 38  
Operator mode automatic 147  
Operator mode fixed 147  
Operator service with free entries 30  
Operator service with PLU's per weight and per piece 26

### P

Prepacking 47  
Preset Tare key 116  
Price change (42) 81  
Printout of code functions and program versions 22  
Priority department modification 24  
Priority price 24

### Q

Query of operator memories 22  
Query of operator memories 22  
Quick service 24  
Quick start in a menu 58

### S

Sales modes 54  
Second price key 116  
Selection of a sales mode 54  
Self-Service (Self-Serv. mode) 41  
Shifting to a different application 25  
Special offer report 128  
Special offers (412) 68

### T

Tare (47) 108  
Tare: types and use 35  
Text - Advertising text (452) 92  
Text - Branch texts (457) 98  
Text - Company names (454) 96  
Text - Date texts (453) 94  
Text - Footer text (459) 102  
Text - Header texts (458) 100  
Text - Operator text (45+2) 106  
Text - Product tip (45+1) 104

### V

Variolabel 134, 145  
VAT (48) 110  
Void: types and use 39  
Vx/scale report IT 125

### W

Weight key 116



**To protect your METTLER TOLEDO product's future:  
METTLER TOLEDO Service assures you of quality, measuring accuracy and preservation of value of the METTLER TOLEDO products for years to come. Please ask for details on our attractive Service Offer.**

Subject to technical modifications and modifications in the extent of supply of accessories.

Address **Mettler - Toledo (Albstadt) GmbH**  
**D-72458 Albstadt**  
Phone **0 74 31 / 14-0**  
Fax **0 74 31 / 14-380**  
Web: **<http://www.mt.com>**

Printed on 100 % FFC manufactured paper.  
To protect our environment.

© Mettler-Toledo (Albstadt) GmbH 2009 ME-22014745B Printed in Germany 1109/9.01

**Internet** **<http://www.mt.com>**

- A** **Mettler-Toledo Gesellschaft mbH.**, Südrandstr. 17, 1230 Wien,  
Tel. (01) 604 19 80, Telefax (01) 604 28 80, Telex 111302
- B** **Mettler-Toledo S. A.**, Leuvensesteenweg 384, 1932 Zaventem,  
Tel. (02) 334 02 11, Fax (02) 334 03 34
- CH** **Mettler-Toledo (Schweiz) AG**, Im Langacher, 8606 Greifensee,  
Tel. (044) 944 45 45, Telefax (044) 944 45 10
- D** **Mettler-Toledo GmbH**, Postfach 110840, 35353 Giessen,  
Tel. (0641) 507-333, Telefax (0641) 507-349, Telex 482912
- E** **Mettler-Toledo S.A.E.**, Avda. San Pablo 28, 28820 Coslada (Madrid),  
Tel. (91) 674 89 30, Fax (91) 669 33 47
- F** **Mettler-Toledo S.A.**, 18/20 Avenue de la Pépinière, 78222 Viroflay Cedex,  
Tél. (01) 30 97 17 17, Fax (01) 30 97 16 16
- I** **Mettler-Toledo S.p.A.**, Via Vialba 42, 20026 Novate Milanese,  
Tel. (02) 33 3321, Telefax (02) 35 62 973
- NL** **Mettler-Toledo B.V.**, Postbus 6006, 4000 HA Tiel,  
Tel. (03440) 63 83 63, Telefax (03440) 63 83 90
- UK** **Mettler-Toledo Ltd.**, 64 Boston Road, Beaumont Leys, Leicester, LE4 1AW,  
Tel. (0116) 235 7070, Fax (0116) 236 6399